


Guide to Complete Repair Planning

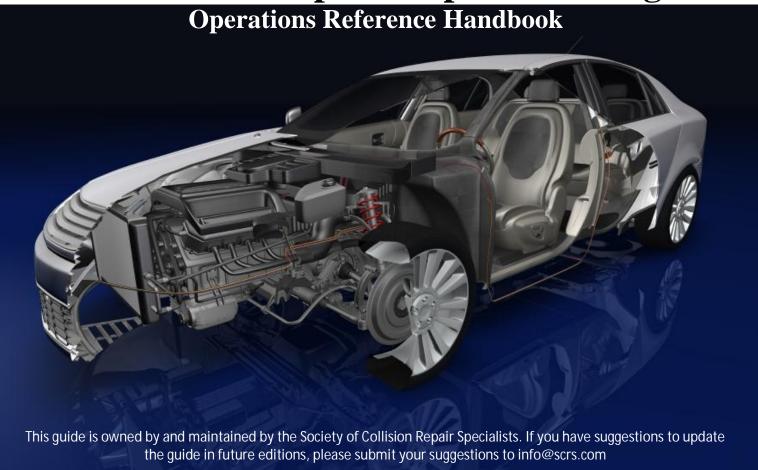

The Society of Collision Repair Specialists (SCRS) recognizes that there are many legitimate operations and services our technicians provide that go unrecognized in the estimate development and final billing processes. The purpose of this document is to aid repair facility personnel in formulating the most accurate repair plan in the estimate preparation process, to minimize the need or expense of a supplement. This document is intended to be used as a guide to develop and maintain processes performed in your repair facility, and serves as a reminder of steps that may be performed during the repair process. This document does not suggest, or promote, that your shop can or should charge for each item listed; and is only intended to be a reminder for repair operations that are performed in your facility.

The document does not contain pricing, quantities, labor hours or any additional information as that should be determined based on your facility's individual requirements. All recipients of this document are herewith notified that the materials presented herein are not to be construed as information or direction to take concerted actions. Information can be utilized by individuals acting within their own judgment.

BASF AUTOMOTIVE REFINISH COATINGS













- Body - Paint - Structural - Mechanical - Detail - Other

Table of Contents:

01.	FRONT & REAR BUMPERS	05.	HOOD	10.	FENDER
15.	CORESUPPORT	20.	RADIATOR / AC & FLUIDS	25.	APRON & UPPER RAIL
30.	WHEELS, TIRES & ALIGNMENT	35.	SUSPENSION / MECHANICAL	40.	SRS/SEAT BELTS
45.	PILLARS	50.	ROCKERS	55.	DOOR SKIN / SHELL
60.	ROOF	65.	CAB CORNER, PICKUP	70.	CAB BACK PANEL, PICKUP
75.	QUARTER PANEL	80.	PICKUP BED SIDE PANEL	85.	VAN/SUV SIDE PANEL
90.	DECK LID	95.	REAR BODY PANEL	100.	FLOOR
105.	PROTECTION & SAFETY	110.	PAINT PREP	115.	REFINISH PROCESS
120.	COLOR-SAND & POLISH	125.	STRIPES	130.	GLASS
135.	FRAME SET UP	140.	FRAME REPLACEMENT	145.	FRONT END DAMAGE
150.	SIDE DAMAGE	155.	REAR END DAMAGE	160.	FLOOR ANCHOR PULLING SYSTEM
165. 180.	THEFT/VANDELISM FINAL BILL / MISCELLANEOUS	170.	DETAIL / CLEAN-UP	175.	TOW, STORAGE & ADMINISTRATION

	MATERIAL SUBLET PRICE	MINIMUM LABOR UNITS
DESCRIPTION	SOBLET FRICE	LABOR UNITS
01 - FRONT AND REAR BUMPERS:		
1. FEATHERFILL, SAND AND BLOCK REPAIR AREA		
2. REMOVE BUMPER MOLDING ADHESIVE		
3. DRILL FOR LICENSE PLATE		
4. R&I LICENSE PLATE		
5. LICENSE PLATE, REPAIR		
6. LOOSEN/PULL BACK BUMPER COVER		
7. CCC BUMPER PROMPT *ADD BACK OVERLAP + CLEAR*		
8. R&I FOG LAMPS		
9. R&I TRAILER HITCH (ON BUMPER)		
10. AIM FOG LAMPS		
11. R&I CAMERA AND WIRING		
12. TRIAL FIT BUMPER		
13. R&I TRAILER HITCH (FRAME BOLT-ON TYPE)		
14. R&I OR R&R SENSORS (SRS-AMBEINT TEMP- ETC)		
15. REPAIR BUMPER BRACKET AND/OR OTHER COMPONENTS		
16. REPAIR BUMPER BRACKET MOUNT AREA		
17. REPAIR ELECTRICAL WIRING TO LAMP LIGHTS		
18. REFINISH O.E.M "RAW" BUMPER		
19. REFINISH, SECOND COLOR ON BUMPER COVER		
20. REFINISH, BLACK-OUT ON BUMPER COVER		
21. PAINT PREP & CLEAN UP USED BUMPER		
22. MASK UNPAINTED AREAS ON BUMPER COVER		
23. MASK BUMPER COVER FOR PRIMER APPLICATION		
24. FLEXIBLE PARTS ADHESION PROMOTOR APPLICATION		
25. REPLACE MINI BULBS		
26. RAW BUMPER PREP KIT		
27. BUMPER FASTENERS/RETAINERS (KIT)		
28. URETHANE BUMPER REPAIR KIT (MATERIALS)		
29. FLEXIBLE PARTS ADDITIVE		



05 - HOOD:	
30. R&I WINDSHIELD WASHER NOSSELS (REPAIR SITUATION)	
31. R&I HOOD INSULATION	
32. WINDSHIELD WASHER HOSE RETAINERS (MORE THAN ONE DESIGN)	
33. REPAIR HOOD LATCH	
34. REPAIR HOOD HINGES AND/OR HINGE MOUNT AREA	
35. ACCESS TIME TO REVEAL DAMAGE	
36. FEATHEREDGE, FILL SAND AND BLOCK (REPAIRED HOOD)	
37. SEAM SEAL INNER EDGE OF NEW HOOD	
38. R&I OR R&R HOOD HINGE	
39. R&I COWL VENT PANEL (ACCESS TO HINGE)	
40. TEST FIT HOOD	
41. MIX PAINT FOR UNDERSIDE SECOND COLOR (ADD FOR 3 RD AND 4 TH COLOR)	
42. COLOR TINT & TEST FOR UNDER SIDE SECOND COLOR	
43. MASK HOOD INNER EDGES	
44. WINDSHIELD WASHER HOSE FASTENER-S (1 ST DESIGN)	
45. WINDSHIELD WASHER HOSE FASTENERS (2ND DESIGN)	
46. HOOD INSULATION RETAINER FASTENERS, REPLACE	
47. HOOD FRONT SEAL/ FASTENERS	
48. HOOD REAR SEAL/ FASTENERS	
49. ALUMINUM MATERIAL LABOR RATE	
50. HOOD LABELS ***HOW MANY?****	
10 - FENDER:	
51. R&I TIRE WHEEL	
52. R&I FENDER LINER	
53. R&I FENDER MOLDINGS, EMBLEMS AND FLARE	
54. R&I MUD FLAP	
55. R&I ROCKER COVER	
56. REPLACE ROCKER COVER FASTENERS (TWO DESIGNS?)	
57. REPLACE FENDER FLARE FASTENERS	
58. CLEAN AND RETAPE FENDER MOLDING-S AND EMBLEM	
59. REPLACE LINER FASTENERS	
60. FEATHEREDGE, FILL SAND AND BLOCK REPAIRED FENDER	
61. CAVITY WAX	
62. REMOVE FACTORY INSTALLED ADHESIVE FOR ACCESS	
63. ALIGN ADJACENT PANEL-S TO FENDER	
64. ANTENNA BASE CORROSION, REPAIR	
65. MASK FENDER JAMS AND OPENINGS	
66. FENDER MLDG CLADDING PREP FOR "RAW"	
67. GRAVEL GUARD	
68. REMOVE STRIPES **ERASER WHEEL***	
69. FENDER BLACK OUT SECOND COLOR	
15 - CORESUPPORT:	
70. ACCESS/PRE-PULLING	
71. PROTECT ENGINE COMPARMENT COMPONENTS	
71. PROTECT ENGINE COMPARIMENT COMPONENTS 72. REPAIR CUT WIRING	
73. AQUIRE RADIO CODE	
74. RESET MEMORY FUNCTIONS	
75. MEMORY "SAVER" COLLISION TOOL 76. REMOVE CAULKING & SEAM SEALER	
10. KEIVIOVE CAULKING & SEAIVI SEALEK	



77. TEST FIT PARTS ATTACHED TO CORESUPPORT	
78. PULL BACK WIRE HARNESS	
79. REPAIR WIRE HARNESS FASTENERS	
80. CLOSE/SECURE OPEN TUBES AND LINES	
81. FEATHER AND FILL WELDS AT WELD LOCATIONS	
82. R&I WHEELS	
83. R&I ROCKER COVERS AND/OR MUD FLAPS	
84. R&I FENDERS (ADD FOR SPLASH SHIELDS & FASTENERS)	
85. R&I ENGINE UNDERCOVER SHIELD	
86. R&I WINDSHIELD WASHER RESERVOIR	
87. R&I AC DRIER	
88. R&I AIR INTAKE DUCTING, AND/OR REPAIR	
89. R&I RADIATOR OVERFLOW TANK, AND/OR REPAIR	
90. R&I SECOND BATTERY	
91. R&I BATTERY TRAY	
92. R&I COMPONENTS ATTACHED BY WELDING/RIVETING	
93. REPAIR LEFT AND RIGHT APRON PANELS, AND PAINT	
94. REPAIR LEFT AND RIGHT UPPER RAILS, AND PAINT	
95. REPAIR LEFT AND RIGHT FRAME RAIL ATTACHMENT AREA	
96. AIM LIGHTS	
97. REMOVE SURFACE CORROSION/ROAD TAR/GREASE	
98. WRAP MASK WIRE HARNESS	
99. MASK BAG ENGINE	
100. MASK A/C LINES-HOSES-HARNESES & COMPONETS	
101. MIX PAINT FOR UNDERSIDE COLOR	
102. SECOND COLOR BLACK-OUT	
103. SPOT PAINT LEFT AND RIGHT FRAME AT WELDED AREAS	
104. SPOT PAINT/BLEND APRON PANEL DAMAGED BY WELDING	
105. REPLACE WIRE HARNESS FASTENERS	
106. REPLACE INFORMATION LABELS **HOW MANY?****	
107. REPLACE HOOD PROP GRUMMET	
108. REPLACE CAULKING AT SEAMS	
109. UNDERCOAT (SECOND COLOR)	
110. CAVITY WAX	
111. COBALT DRILL BIT (BORON-TRIP-UZI BOR)	
112. COLATERAL DAMAGE FROM THE REPAIR PROCESS (BUILD SEQUENCE)	
113. WELD-THROUGH PRIMER	
20 - RADIATOR, AC AND FLUIDS:	
114. REPAIR RADIATOR	
115. REPAIR RADIATOR 115. REPAIR FAN SHROUD(S)	
116. REPAIR AC CONDENSER/LINES	
117. FLUSH LKQ CONDENSER/LINES	
118. FLUSH LKQ RADIATOR/LINES	
119. REPAIR AC LINES & TUBES	
120. REPLACE RADIATOR "O"-RINGS **TRANS**	
121. REPAIR TRANS COOLER/LINES	
122. REPAIR TRAINS COOLER/LINES 122. REPAIR WIRING/FASTENERS ATTACHED TO FAN SHROUDS	
122. REPAIR WIRING/FASTENERS ATTACHED TO FAIN SHROUDS 123. PRESSURE TEST COOLING SYSTEM	
124. BLEED COOLING SYSTEM	
124. BLEED COOLING SYSTEM 125. TEST AC SYSTEM/CONTIMANITES	
126. RECOVER AC FREON	
120. NEGOVER AG FREON	



127. EVACUATE & RECHARGE AC SYSTEM	
128. TEST KIT REFRIGERANT RECOVERY	
129. COOLANT, OEM RECOMMENDED PER GALLON	
130. VACUUM FILL RADIATOR	
131. TRANMISSION FLUID (PINT)	
132. STEERING FLUID (PINT)	
133. WINDSHIELD WASHER FLUID	
134. R-134 FREON AND OIL (TWO POUNDS)	
135. O-RING SEAL KIT FOR AC LINES	
25 - APRON/UPPER RAIL:	
136. PRE-PULL/ACCESS	
137. REMOVE CAULKING & SEAM SEALER	
138. REPLACE CAULKING AND SEAM SEALER (NEW PART)	
139. TEXT COAT, SPRAYABLE SEALER	
140. UNDERCOAT, BLACK	
141. EXPANSION FOAM	
142. CAVITY WAX RUSTPROOFING	
143. WELD-THROUGH PRIMER	
144. TEST FIT ADJACENT PARTS	
145. R&I CRUISE CONTROL UNIT, AND/OR REPAIR	
146. R&I ELECTRONIC CONTROL MODULE, AND/OR REPAIR	
147. R&I AIR INTAKE DUCTING, AND/OR REPAIR	
148. R&I AC TUBING AND HOSE	
149. R&I SRS SENSOR	
150. R&I WINDSHIELD RESERVOIR, AND/OR REPAIR	
151. R&I BATTERY TRAY	
152. R&I FUSE BOX, AND/OR REPAIR	
153. R&I EMISSION CANISTOR AND HOSES, AND/OR REPAIR	
154. R&I CAB INTERIOR COMPONENTS (INNER TRIM, DASH, HEATER BOX / AC)	
155. PULL BACK WIRE HARNESS	
156. FEATHER AND FILL CONTOUR REPAIR AREAS	
157. FEATHER AND FILL WELDS	
158. COLATERAL DAMAGE FROM THE REPAIR PROCESS (BUILD SEQUENCE)	
159. COBALT DRILL BIT (BORON-TRIP-UZI BOR)	
160. CLEAN FILE AND DEBUR WELD AREA	
161. REPAIR ADJOINING PANELS DAMAGED BY WELDING	
162. WRAP MASK WIRE HARNESS AT APRON	
163. WRAP MASK ENGINE	
164. SECOND COLOR, ENGINE SIDE (CUSTOM COLOR MATCH)	
165. THIRD COLOR, FENDER SIDE (CUSTOM COLOR MATCH)	
166. BLACK-OUT ON APRON, SECOND OR THIRD COLOR	
167. UNDERSIDE SECOND COLORS, REFINISH	
30 - WHEELS/TIRES/WHEEL ALIGNMENT:	
168. REPLACE VALVE STEMS AND WEIGHTS	
169. MOUNT & BALANCE TIRE	
170. R&I WHEEL COVERS	
171. TIRE DISPOSAL FEE	
172. REPAIR RIM EDGE, POLISH SKUFF MARKS	
173. ROTATE TIRES	
174. RESET TIRE PRESSURE SENSORS	



	 -
175. R&I WHEEL COVERS TO MOUNT ALIGNMENT HEADS	
176. FOUR WHEEL ALIGNMENT	
177. ECENTRIC ALIGNMENT KIT (PER SIDE)	
178. INSPECT SUSPENSION COMPONENTS FOR DAMAGE	
35 - SUSPENSION/MECHANICAL:	
179. BLEED BRAKES AND ADD FLUID (PINT)	
180. BLEED BRAKES (ABS)	
181. RESET ABS SYSTEM WITH SCANNER	
182. SHIFT CROSSMEMBER	
183. MEMORY "SAVER" COLLISION TOOL	
184. SHIFT ENGINE CRADLE	
185. ADJUST LINKAGE-S	
186. DRAIN & TRANSFER FUEL	
187. CHECK RUN-OUT ON WHEEL (NEEDED TO FOR BALANCE)	
40 - SRS/SEAT BELTS:	
188. CLEAN UP DEPLOYED AIR BAG RESIDUE	
189. REPAIR SEAT FRAME	
190. INSPECT SEAT BELTS	
191. CLEAR SRS FUNCTION CODE ON DASH	
192. INSPECT SRS WIRING	
45 - PILLARS:	
193. PRE-PULL PILLAR	
194. REMOVE CAULKING AND SEAM SEALER	
195. REPLACE CAULKING AND SEAM SEALER	
196. EXPANSION FOAM	
197. CAVITY WAX RUSTPROOFING	
198. WELD-THRU PRIMER	
199. FABRICATE PILLAR SLEEVE INSERTS	
200. TEST FIT PARTS ADJACENT TO PILLAR	
201. R&I SEAT TO ACCESS PILLAR REPAIRS/REPLACEMENT	
202. COLBALT BIT UHSS 203. PULL BACK WIRE HARNESS	
204. FEATHER & FILL CONTOUR REPAIR AREA 205. REPAIR/DRESS WELDS AT FLANGES	
206. CLEAN FILE AND DEBUR WELD AREA	
207. COLATERAL DAMAGE FROM THE REPAIR PROCESS (BUILD SEQUENCE)	
208. WRAP MASK WIRE HARNESS	
209. MASK TO PROTECT INTERIOR	
210. SPOT REFINISH INNER SIDE OF PILLAR	
211. REFINISH SECOND COLOR BLACK-OUT ON PILLAR	
50 - ROCKERS:	
212. PRE-PULL ROCKER	
213. REMOVE CAULKING & SEAM SEALER	
214. REPLACE CAULKING & SEAM SEALER	
215. EXPANSION FOAM	
216. TEXT COAT	
217. CAVITY WAX	
218. WELD-THRU PRIMER	
219. FABRICATE ROCKER SLEEVE INSERTS	
220. TEST FIT PARTS ADJACENT TO ROCKER	
ZZU. ILJI FII FARTJ ADJAGLINI TO KOGNEK	



221. GRAVEL/STONE GUARD (**NOTE THE THICKNESS***) PER TUBE	
222. R&I SEAT	
223. R&I SEAT BELT-S	
224. PULL BACK CARPET AND PADDING	
225. STONE GUARD DECAL	
226. PULL BACK WIRE HARNESS	
227. REPAIR/DRESS WELDS AT FLANGES	
228. REPAIR INNER ROCKER	
229. REPAIR INNER ROCKER 229. REPAIR A-PILLAR AT WELD AREA	
230. REPAIR CENTER PILLAR AT WELD AREA	
231. REPAIR CENTER FILEAR AT WEED AREA	
231. REPAIR 1 LOOK AT WELD AREA	
233. CLEAN FILE AND DEBUR WELD AREA	
233. CLEAN FILE AND DEBOR WELD AREA 234. COLATERAL DAMAGE FROM THE REPAIR PROCESS (BUILD SEQUENCE)	
235. COBALT DRILL BIT (BORON-TRIP-UZI BOR)	
236. FEATHER & FILL CONTOUR REPAIR AREAS	
236. FEATHER & FILL CONTOUR REPAIR AREAS 237. WRAP MASK WIRE HARNESS	
237. WRAP MASK WIRE HARNESS 238. MASK TO PROTECT INTERIOR	
239. MASK FOR PRIMER APPLICATION	
240. PREP FOR ROCKER PANEL MLDG CLADDING "RAW"	
241. REFINISH INNER ROCKER	
242. REFINISH A-PILLAR	
243. REFINISH CENTER PILLAR	
244. REFINISH FLOOR AREA	
245. REFINISH LOCK POST	
246. REFINISH ¼ PANEL AT WELD AREA	
247. REFINISH BLACK-OUT AT ROCKER	
248. TEXT COAT ROCKER, OUTER (MASKING REQUIRED)	
249. TEXT COAT ROCKER, BACK SIDE	
55 - DOOR SKIN/SHELL:	
250. DISCONNECT AND RECONNECT BATTERY	
250. DISCONNECT AND RECONNECT BATTERY 251. PROTECT INTERIOR FOR PROTECTION	
252. ACQUIRE RADIO CODE & PLACE TO OFF POSITION	
253. RESET MEMORY FUNCTIONS	
254. REMOVE ADHESIVE AT INTRUSION BEAM, BELT REINF & DR EDGE	
255. REPLACE CAULKING & SEAM SEALER	
256. WELD-THRU PRIMER	
257. CAVITY WAX	
258. FLUTTER BONDING	
259. SOUND DEADENER PAD-S	
260. CLEAN & RETAPE ADHESIVE DOOR MOLDING	
261. REPLACE DOOR EDGE GUARD MOLDING	
262. REPAIR VAPOR BARRIER WEATHER SHIELD	
263. REPLACE VAPOR BARRIER, (OEM)	
264. REPLACE BELT MOLDING FASTENERS	
265. TEST FIT DOOR BEFOR WELD-BONDING	
266. REPAIR EDGE OF DOOR SHELL, (REMOVAL DISTORTION)	
266. REPAIR EDGE OF DOOR SHELL, (<i>REMOVAL DISTORTION</i>) 267. RE-BOND INTRUSION BEAM/BELT REINSTALL FLUTTER MATERIAL	
268. DOOR SKIN BONDING KIT	
269. ADJUST/RECALIBRATE POWER DOOR LOCK SYSTEM	
207. ADJUST/INCOMEIDINATE FOWER DOOK LOOK STSTEIVI	



270. FEATHER & FILL CONTOUR REPAIR AREAS, (DOOR EDGE)		
271. DRESS WELDS		
272. STONE GUARD DECAL		
273. R&I RAIN SHIELD (VENT SHADE)		
274. R&I WELDED BELT REINFORCEMENT PANEL		
275. R&I SRS AIR BAG		
276. R&I DOOR MIRROR		
277. R&I DOOR GLASS		
278. R&I AIR-SEAL WEATHER STRIP AT PERIMETER (SOME MODELS ONLY)		
279. R&I DOOR CHECK (WHEN SKINNING DOOR)		
280. R&I DOOR LATCH, (WHEN SKINNING DOOR)		
281. R&I DOOR CHECK		
282. R&I DOOR LATCH		
283. R&I DOOR SPEAKER		
284. R&I DOOR GLASS RUN CHANNEL		
285. WRAP/MASK WIRE HARNESS		
286. PREP DOOR CLADDING FOR "RAW" PROCESSING		
287. MASK DOOR OPENINGS & JAMS		
288. WINDOW BLACK OUT AT WINDOW FRAME, (SECOND COLOR)		
289. GRAVEL GUARD		
290. DOOR SKIN BONDING MATERIAL		
291. RECODE DOOR LOCK CYLINDER		
292. DOOR FASTENERS & RIVETS		
293. RR&I LKQ DOORS-CHARGE TO DISASSEMBLE BOTH DOOR		
60 - ROOF:		
294. R&I ANTENNA MAST THAT IMPEDES ACCESS		
295. MASK SUN ROOF OPENING/EDGES		
296. R&I ALL INTERIOR AND EXTERIOR **ATTACHMENTS ****		
297. PREPAIR FOR WELD BONDING		
298. REPAIR ADJACENT PANELS DISTORTED IN REMOVAL PROCESS		
299. FEATHER & FILL CONTOUR REPAIR AREAS		
300. REMOVE EXPANSION FOAM FROM ROOF REINFORCEMENTS		
301. REMOVE URETHANE RESIDUE ON PINCH WELDS (FULL CUT OUT)		
302. REPAIR DAMAGE TO PINCH WELD FROM GLASS REMOVAL KNIFE		
303. FEATHER & FILL WELDS 304. REMOVE EXPANSION FOAM		
305. EXPANSION FOAM (PER CAN)		
306. REMOVE PANELS FOR INSTALLATION *		
307. REPAIR ADJACENT REINFORCEMENT PANEL-S		
308. R&I SEAT-S		
309. CLEAN FILE AND DEBUR WELD AREA		
310. COVER AND PROTECT INTERIOR		
311. R&I WIRE HARNESS		
312. WELD-THRU PRIMER		
313. CAVITY WAX		
314. REPLACE SOUND DEADENER PADS (EACH PACK)		
315. FLUTTER FOAM (PER TUBE)		
316. COLATERAL DAMAGE FROM THE REPAIR PROCESS (BUILD SEQUENCE)		
317. BLEND RIGHT SIDE ROOF PILLARS		
	1	
318. BLEND LEFT SIDE ROOF PILLARS 319. MASK FOR PRIMER APPLICATION		



	 ,
320. PULLBACK/ROPE/MASK BACK GLASS MOLDING	
321. PULLBACK/ROPE/MASK WINDSHIELD MOLDING	
322. PULLBACK/ROPE/MASK LEFT QUARTER GLASS	
323. PULLBACK/ROPE/MASK RIGHT QUARTER GLASS	
324. COBALT DRILL BIT (BORON-TRIP-UZI BOR)	
325. WINDSHIELD INSTALLATION KIT	
326. BACK GLASS INSTALLATION KIT	
327. QUARTER GLASS INSTALLATION KIT	
65 - CAB CORNER, PICKUP:	
328. PRE-PULL CAB CORNER AS NEEDED	
329. REMOVE CAULKING & SEAM SEALER	
330. REPLACE CAULKING & SEAM SEALER (REPAIR AND REPLACE)	
331. CAVITY WAX	
332. WELD-THRU PRIMER	
333. TEST FIT ADJACENT PARTS AS NEEDED	
334. FABRICATE CAB CORNER SLEEVES	
335. PULL BACK WIRE HARNESS	
336. SOUND DEADENER	
337. R&I SEAT	
338. R&I CARPET AND FLOOR INSULATION	
339. FEATHER & FILL CONTOUR REPAIR AREAS	
340. MASK FOR PRIMER APPLICATION	
341. FEATHER & FILL WELDS	
342. REPAIR ROCKER	
343. REPAIR REINFORCEMENT AND INNER PANEL	
344. MEASURE CAB FOR SQUARE	
345. REPAIR FLOOR	
346. REPAIR GLASS-OPEN FLANGES FROM CUT-OUT KNIFE DAMAGE	
347. COLATERAL DAMAGE FROM THE REPAIR PROCESS (BUILD SEQUENCE)	
348. PULL BACK /ROPE/MASK BACK GLASS	
349. PULL BACK/ROPE/MASK QUARTER GLASS	
350. REPLACE SOUND DEADENER PAD	
351. TRANSFER WELDED DOOR STRICKER PLATE	
352. REFINISH BACK SIDE OF CAB CORNER	
353. MASK WRAP WIRE HARNESS	
354. MASK/BAG INTERIOR FOR REFINISH	
355. MASK JAMS AND OPENINGS	
356. SPOT PAINT INNER SIDE OF WELDED FLANGES	
357. SPOT PAINT ROCKER	
358. SPOT PAINT BACK PANEL	
359. SPOT PAINT FLOOR	
360. GRAVEL GUARD CAB CORNER	
361. BACK GLASS INSTALLATION KIT	
362. QUARTER GLASS INSTALLATION KIT	
70 - CAB BACK PANEL, PICKUP:	
363. PRE-PULL BACK PANEL	
363. PRE-PULL BACK PANEL 364. REMOVE CAULKING & SEAM SEALER	
365. REPLACE CAULKING & SEAM SEALER	
366. CAVITY WAX COATING	
367. TEXT COAT, (SPRAY SEALER)	



368. WELD-THRU PRIMER	
369. SOUND DEADENER	
370. R&I TIRE REPLACMENT TOOLS	
371. REPAIR ADJACENT PANELS DAMAGED BY WELDING	
372. R&I SEAT	
373. R&I SEAT BELTS	
374. R&I CARPET AND INSULATION	
375. PULL BACK WIRE HARNESS	
376. FEATHER & FILL CONTOUR REPAIR AREA	
377. FEATHER & FILL WELDS	
378. CLEAN FILE AND DEBUR WELD AREA	
379. REPAIR GLASS OPEN FLANGE DAMAGE FROM CUT KNIFE	
380. WRAP MASK WIRE HARNESS	
381. MASK/BAG INTERIOR FOR REFINISH	
382. MASK FOR PRIMER APPLICATION	
383. REFINISH INNER SIDE	
384. SPOT PAINT INNER CAB CORNERS	
385. SPOT PAINT FLOOR	
386. BLACK OUT ON CAB BACK PANEL	
387. CAB CORNER GLASS INSTALLATION KIT	
75 - QUARTER PANEL:	
388. D&R BATTERY	
389. RESET MEMORY FUNCTIONS	
390. PROTECT INTERIOR FROM REPAIR CONTAMINATION 391. PRE-PULL QUARTER	
391. PRE-PULL QUARTER 392. REMOVE CAULKING AND SEAM SEALER *RANGE	
392. REMOVE CAULKING AND SEALER RANGE 393. REPLACE CAULKING AND SEAM SEALER (PER TUBE)	
393. REPLACE CAUCKING AND SEALER (PER TUBE) 394. UNDERCOAT AT WHEEL WELL	
395. CAVITY WAX	
396. EXPANSION FOAM (PER TUBE)	
397. SOUND DEADENER TEXT COAT WITH SPRAYBLE SEALER	
398. SECOND COLOR BACK-SIDE	
399. WELD-THRU PRIMER	
400. SOUND DEADENER PADS	
400. SOUND DEADENER PADS 401. CLEAN & RE-TAPE GLUE ON MOLDINGS	
401. CLEAN & RE-TAPE GLUE ON MOLDINGS 402. REPLACE QUARTER W/O MOLDING WITH AFTERMARKET	
403. FABRICATE QUARTER AND ROCKER PANEL SLEEVES	
403. FADRICATE QUARTER AND ROCKER PANEL SLEEVES 404. REPAIR WHEEL HOUSE, FROM ADHESIVE DISTORTION DAMAGE	
405. TEST FIT ATTACHING PARTS ** TAILLAMPS, GLASSES ETC**	
406. PULL BACK WIRE HARNESS	
400. POLL BACK WIRE HARNESS 407. R&I BACK SEAT-S	
407. R&I BACK SEAT-S 408. R&I SEAT BELTS	
409. PULL BACK CARPET & FLOOR INSTULATION	
410. FEATHER & FILL CONTOUR REPAIR AREAS, ROCKER & PILLAR	
411. DOOR OPEN FLANGE BACKSIDE, REPAIR/DRESS WELDS	
411. DOOR OPEN FLANGE BACKSIDE, REPAIR/DRESS WELDS 412. WHEEL OPEN BACKSIDE WELDS, REPAIR/DRESS	
412. WHEEL OPEN BACKSIDE WELDS, REPAIR/DRESS 413. REPAIR DECK LID TROUGH	
413. REPAIR DECK LID TROUGH 414. ROCKER WELDS BACKSIDE, REPAIR/DRESS	
415. REAR BODY PANEL BACKSIDE AT WELD AREA, REPAIR/DRESS	
416. GLASS FLANGE BACKSIDE OF WELD AREA, REPAIR/DRESS 417. TRUNK FLOOR POCKET WELD AREA REAR OF TIRE, REPAIR/DRESS	
417. TRUTA FLOOR POUNET WELD AKEA KEAK OF TIKE, KEPAIK/DKESS	



Labor Category Legend – By Color:

Body

Body

Structural

Mechanical

Detail

Other

418. GRAVEL GUARD (SPRAY-ON)		
419. STONE GUARD DECAL		
420. REPLACE FOAM ADHESIVE BETWEEN WHEEL HOUSE & QTR		
421. REPAIR GLASS OPEN FLANGE DAMAGE FROM CUT KNIFE		
422. INSTALL SHUNTING PLIERS		
423. INSTALL CUT LINE TAPE		
424. COLATERAL DAMAGE FROM THE REPAIR PROCESS (BUILD SEQUENCE)		
425. COBALT DRILL BIT (BORON-TRIP-UZI BOR)		
426. CLEAN FILE AND DEBUR WELD AREA		
427. CAUTIONARY MEASURES TO PREVENT GLASS MOLDING DAMAGE		
428. MASK WRAP WIRE HARNESS		
429. MASK/BAG INTERIOR FOR REFINISH		
430. MASK QUARTER JAMBS & OPENINGS		
431. MASK FOR PRIMER APPLICATION		
432. SPOT PAINT DOOR OPEN FLANGE, BACKSIDE		
433. SPOT PAINT WHEEL OPEN BACKSIDE WELD AREA		
434. SPOT PAINT ROCKER, BACK SIDE		
435. SPOT PAINT BACKSIDE OF BACK PANEL AT WELD AREA		
436. SPOT PAINT BACKSIDE OF GLASS FLANGE WELD AREA		
437. SPOT PAINT TRUNK FLOOR WELD AREA		
438. REFINISH WELD DAMAGE AREAS ** EACH DIRECTION***		
439. REFINISH TWO TONE BLACK-OUT		
440. PULL-BACK/MASK QUARTER GLASS		
441. PULL-BACK/MASK BACK GLASS		
442. PREP QUARTER PANEL CLADDING FOR "RAW" PROCESSING		
443. REPLACE QUARTER GLASS URETHANE INSTALLATION KIT		
444. REPLACE BACK GLASS URETHANE INSTALLATION KIT		
80 - PICKUP BED SIDE PANEL:		
445. PREPULL BED SIDE PANEL		
446. PREPULL BED FLOOR PANEL		
447. STRIP SPRAY-ON BED LINER, COMPLETE		
448. REPLACE SPRAY-ON BED LINER, COMPLETE		
449. STRIP SPRAY-ON BED LINER, PARTIAL		
450. REPLACE SPRAY-ONBED LINER, PARTIAL		
451. R&I REAR BUMPER 452. R&I BED ASSEMBLY		
453. REPLACE BED BOLTS, AS NEEDED		
454. R&I DROP-IN BED LINER		
455. R&I CAMPER SHELL		
456. R&I TONNEAU COVER		
457. REMOVE CAULKING AND SEAM SEALER		
458. REPLACE CAULKING AND SEAM SEALER		
459. REPLACE SELF LEVELING SEAM SEALER		
460. UNDERCOAT UNDERSIDE		
461. CAVITY WAX		
462. SOUND DEADENER SPRAYABLE SEALER		
463. WELD-THRU PRIMER		
464. TEST FIT PARTS ATTACHED TO BED SIDE		
465. REPLACE BONDING FOAM, UNDERSIDE OF BED RAIL		
LAZZ DEDLACE DONDING FOAM MULEEL MELL TO DED CIDE DNI	1	
466. REPLACE BONDING FOAM, WHEEL-WELL TO BED SIDE PNL 467. REPLACE FLARE FASTENERS		



468. REPLACE FLARE ADHESIVE STAL 470. PULL BACK WIRE HARNESS 471. STONE CURARD DECAL 472. FEATHER & FILL CONTOUR REPAIR AREA 473. FEATHER & FILL CONTOUR REPAIR AREA 474. COLATERAL DAMAGE FROM THE REPAIR PROCESS (BUILD SCOUENCE) 475. LOOSEN AND FREE RUST LOST DECENORY 476. ECOSEN AREA FREE RUST LOST DECENORY 477. EXPANSION FOAM PER TUBE) 478. REPAIR FROM THE REPAIR PROCESS (BUILD SCOUENCE) 479. REPAIR FROM THE RUST LOST DECENORY 479. REPAIR FROM THE DAMEL 479. REPAIR FROM THE DAMEL 479. REPAIR FROM THE DAMEL 481. SPOT PAINT INNER BED PANEL 481. SPOT PAINT INNER BED PANEL 482. MASK WARP WIRE HARRESS 483. MASK BED INNERIOR 484. MASK OF PRIMT RAP WILE FAIR FROM THE REPAIR THE AREA T		1
470 PULL BACK WIRE HARNESS 471 STONE GUARD DECAL 472 FEATHER & FILL CONTOUR REPAIR AREA 473 FEATHER & FILL CONTOUR REPAIR AREA 473 FEATHER & FILL WELDS 474 COLATERA DAMAGE TROM THE REPAIR PROCESS (BUILD SEQUENCE) 475 LODGEN AND FREE RUSTED/STUCK BOLTS 476 REPAIR CARNED ANAMAGE REMOVAL DISTORTION 477 EVANSION FOAM (PER TUBE) 478 REPAIR FROM FEED TABLE 479 REPAIR INAMES REMOVAL DISTORTION 478 REPAIR FROM FEED PANEL 479 REPAIR INAMES RED PANEL 480 REPAIR REAR SILL PANEL 481 SPOT PAINT INNER BED PANEL 482 MASK WARP WIRE HARNESS 483 MASK BED INTERIOR 484 MASK FOR PRIMER APPLICATION 485 SPOT PAINT FROM TEED PANEL 486 SPOT PAINT FROM TEED PANEL 487 REFINISH TWO TONE BLACK OUT 488 CRAVEL GUARD 487 REFINISH TWO TONE BLACK OUT 488 CRAVEL GUARD 489 PRE-PULL SIDE PANEL 490 CAUTIONARY MEASURES TO PREVENT QUARTER GLASS DAMAGE 491 CLASS FOR PAINT REAR SILL FANEL 491 CLASS FOR PAINT REAR SILL FANEL 492 CULARTER GLASS INSTALLATION NIT 493 REMOVE GUALKING AND SEAM SEALER 494 REPLACE CAULKING AND SEAM SEALER 495 UNDERFORD THAN E DAMAEL 496 CAVITY WAR AND SEAM SEALER 497 REPLACE CAULKING AND SEAM SEALER 498 CHULD-THEIR PRIMER 499 REPULL SIDE PANEL 490 CLADA TE ALTER PASTAMES E SALER 499 REPULL SIDE PANEL 490 CAUTIONARY MEASURES TO PREVENT QUARTER GLASS DAMAGE 501 CLAS RETER SIDE PANEL 503 TERST FIT PARS ATTACHED/ADJACENT TO SIDE PANEL 504 CAVITY WAR AND SEAM SEALER (PER TUBE) 505 THE BRACK GUARD MICHIES SOON SEAM SEALER (PER TUBE) 506 THE BRACK GUARD MICHIES SOON SEAM SEALER (PER TUBE) 507 RAS SEAT SELF PANEL SELFVIS 508 TEST FIT PARS ATTACHED/ADJACENT TO SIDE PANEL 509 TERST SIDE PANEL SELFVIS 509 TEST FIT PARS ATTACHED/ADJACENT TO SIDE PANEL 500 CLEAN A RETURE SIDE PANEL SELFVIS 501 REST FIT PARS ATTACHED/ADJACENT TO SIDE PANEL 502 TEST FIT PARS ATTACHED/ADJACENT TO SIDE PANEL 503 TEST FIT PARS ATTACHED/ADJACENT TO SIDE PANEL 504 TEST FIT PARS ATTACHED/ADJACENT TO SIDE PANEL 505 TEST FIT PARS ATTACHED/ADJACENT TO SIDE PANEL 506 TEST FIT PARS ATTACHED FROM FOUNT TO SIDE PANEL 507 THE AND THE TURN THAT THE TURN THAT THE TURN THAT	468. REPLACE FLARE ADHESIVE SEAL	
471 STONE GUARD DECAL 472 FEATHER & FILL WELDS 473 FEATHER & FILL WELDS 474 COLATERAL DAMAGE FROM THE REPAIR PROCESS (BUILD SEQUENCE) 475 COLATERAL DAMAGE FROM THE REPAIR PROCESS (BUILD SEQUENCE) 476 REPAIR CAP PARLI FLANCE, REMOVAL DISTORTION 476 REPAIR CAP PARLI FLANCE, REMOVAL DISTORTION 477 EXPANSION FOAM (PER TUBE) 478 REPAIR RONT BED PANEL 479 REPAIR INNER BED PANEL 480 REPAIR REAR SILL PANEL 481 SPOT PAINT INNER BED PANEL 481 SPOT PAINT INNER BED PANEL 482 MASK WARP WIRE HARNESS 483 MASK BED INTEROR 484 MASK SED INTEROR 485 SOPT PAINT FROM BED PANEL 486 SPOT PAINT FROM BED PANEL 487 REFINISH TWO TONE BLACK OUT 488 GRAVL GUARD 487 REFINISH TWO TONE BLACK OUT 488 GRAVL GUARD 489 PEP PULL SIDE PANEL 489 PEP PULL SIDE PANEL 489 PEP PULL SIDE FANEL 490 CAUTIONARY MEASURES TO PREVENT OUARTER CLASS DAMAGE 491 CLASS OPEN FLANGE DAMAGE FROM CUT KNIFE, REPAIR 492 OUARTER GUASS INSTALLATION KIT 493 REMOVE CAULKING AND SEAM SEALER 494 REPLACE CAULKING AND SEAM SEALER 495 LEVERANSION TSOME AND SEAM SEALER 496 CAUTIONARY MEASURES SEALER 497 WELD THRU PIDIFIER 498 SOUND DEADENER SPRAYABLE SEALER 499 CAPITIONARY SIDE PANEL 499 LEVERANSION FLOM SEAM SEALER (PER TUBE) 500 CLETAN RETAILE PIDLE PIDLE FLANE	469. CLEAN & RETAPE ADHESIVE MOLDING-S	
472 FEATHER & FILL CONTOUR REPAIR AREA 473 FEATHER & FILL WELDS 474 COLATERAL DAMAGE FROM THE REPAIR PROCESS (BUILD SEQUENCE) 475 LOOSEN AND FREE RUSTED/STUCK BOLTS 476 REPAIR CAPRAIL FANNER, ERMOVAL DISTORTION 477 EXPANSION FOAM (FER TUBE) 479 REPAIR SINNER BED PANEL 479 REPAIR SINNER BED PANEL 479 REPAIR INNER BED PANEL 479 REPAIR SINNER BED PANEL 479 REPAIR TINNER BED PANEL 479 REPAIR TINNER BED PANEL 480 REPAIR ERAR SILL FANEL 481 SPOT PAINT INNER BED PANEL 482 MASK WARP WIRE HARNESS 483 MASK BED INTERIOR 484 MASK FOR PRIMER APPLICATION 485 SPOT PAINT FROM BED PANEL 486 SPOT PAINT FROM BED PANEL 487 REFINISH TWO TOME BLACK OUT 488 GRAVEL GLARD 487 PRE-PULL SIDE PANEL 489 PRE-PULL SIDE PANEL 489 PRE-PULL SIDE PANEL 489 PRE-PULL SIDE PANEL 490 CAUTIONARY MEASURES TO PREVENT OUARTER CLASS DAMAGE 491 GLASS OPEN FLANGE DAMAGE FROM CUT KNIFE, REPAIR 492 QUARTER GLASS INSTALIATION KIT 493 REMOVE CAULKING AND SEAM SEALER (PER TUBE) 495 UNDERCOAT SIDE PANEL 496 CAVITY WAX 497 WELD THRU PRIMER 498 SOUND DEADERER SPRAYABLE SEALER 499 EXPANSION FOAM SETTEM SPRAYABLE SEALER 590 PREPLACE WHELE FLARE FASTENERS & ADHESIVE STRIP 500 CLEAN & RETARE ADHESIVE MOLDINGS 501 REPLACE WHELE FLARE FASTENERS & ADHESIVE STRIP 502 CLEAN & RETARE ADHESIVE MOLDINGS 503 TEST HIT PARTS ATTACHED/ADJACKIN TO SIDE PANEL 504 CLEAN & RETARE ADHESIVE MOLDINGS 505 PANEL SECON FROM SEAR SEALER 506 RESEARS S 507 REI SEAT BEITS 508 RECOVER FROM 509 PULL BACK WIRE HANNESS 509 RE SEATE BEITS 500 RESEATE SEALER 500 RESEATE SEALER 500 RESEATE SEALER 501 REPLACE WHELE FLARE FASTENERS & ADHESIVE STRIP 502 CLEAN & RETARE ADHESIVE MOLDINGS 505 PULL BACK WIRE HANNESS 506 REI SEATE S 507 REI SEAT BEITS 508 RECOVER FROM 508 PULL BACK WIRE HANNESS 509 REFEATE ADHESIVE MOLDINGS 510 REPAREL BACK CAMPONENTS 511 PULL BACK CARPET AND FLOOR INSULATION 512 REAS SILL AT WELD ADREA, REPAIR 515 WHELE OPEN INNER STRUCTURE, REPAIR		
473. EARTHER & FILL WELDS 474. COLATERAL DAMAGE FROM THE REPAIR PROCESS (BUILD SEQUENCE) 475. LOOSEN AND FREE RUSIED/STUCK BOLIS 476. REPAIR CAP-RAIL FLANGE, REMOVAL DISTORTION 477. EXPANSION FOAM (PER TUBE) 478. REPAIR FRONT BED FANEL 479. REPAIR INNER BED PANEL 479. REPAIR INNER BED PANEL 480. REPAIR REAR SILL PANEL 481. SPOT PAINT INNER BED PANEL 482. MASK WARP WIRE HARNESS 483. MASK BED INTERIOR 484. MASK DED INTERIOR 485. SPOT PAINT FRONT BED PANEL 486. SPOT PAINT FRONT BED PANEL 486. SPOT PAINT FRONT BED PANEL 487. REFINISH TWO TONE BLACK OUT 488. GRAVEL GUARD 487. REFINISH TWO TONE BLACK OUT 488. GRAVEL GUARD 489. PRE-PULL SIDE PANEL 490. CAUTIONARY MEASURES TO PREVENT GUARTER GLASS DAMAGE 491. GLASS OPEN FLANGE DAMAGE FROM CUT KNIFE, REPAIR 492. CUARTER GLASS INSTALLATION KIT 493. REMOVE CAULKING AND SEAM SEALER 494. REPAIRS CAULKING AND SEAM SEALER 495. LOURTER GLASS INSTALLATION KIT 494. REPAIRS CAULKING AND SEAM SEALER 496. CAVITY WAX 497. WELD-THERU PRIMER 498. SOUND DEADENER SPRAYABLE SEALER 499. SOUND DEADENER SPRAYABLE SEALER 499. SEADNED FROM THE REPAIR FROM THE SEALER 500. CLEAN RE RETARE ADJESIVE MOLDINGS 501. REPLACE WHELE I FLARE FASTENERS & ADHESIVE STRIP 502. FABRICATE SIDE PANEL SEEVES 503. TEST ETT PARTS ATTACHED/ADJACENT TO SIDE PANEL 504. REPAIRS WHELE I FLARE FASTENERS & ADHESIVE STRIP 505. PAREL SEAR SHALE SEEVES 506. REFLORE WHELE I FLARE FASTENERS & ADHESIVE STRIP 507. RAS ISEAT BELT-S 508. RECOVER FROM 509. EVACUATE & RECHARGE AC "SEPARATE FROM FRONT A/C" 510. RRI REAR HEATER/AC COMPONENTS 511. PULL-BACK CARPET AND FOOR INSULIATION 512. REAR SILL AT WELD AREA. 515. WHELE OPEN RENDER SEPARA 516. CLEAN RIE FLARE FROM FOOR INSULIATION 517. REAR SILL AT WELD AREA. 516. CLEAN RIE LAND DEBUT WELD AREA.		
473. COLATERAL DAMAGE FROM THE REPAIR PROCESS (BUILD SEQUENCE) 475. LOOSEN AND FREE RUSTED/STUCK BOLTS 476. REPAIR CAP-RAIL FLANCE, REMOVAL DISTORTION 477. EXPANSION FOAM (PER TUBE) 478. REPAIR FRONT BED PANEL 479. REPAIR INNER BED PANEL 479. REPAIR INNER BED PANEL 480. REPAIR REAR SILL PANEL 481. SPOT PAINT INNER BED PANEL 482. MASS. WRAP WIRE HARNESS 483. MASS BED INTEROR 484. MASS. FOR PRIMER APPLICATION 485. SPOT PAINT FROM BED PANEL 486. REFINISH TWO TONE BLACK OUT 488. GRAVEL GUARD 487. REFINISH TWO TONE BLACK OUT 488. GRAVEL GUARD 487. REFINISH TWO TONE BLACK OUT 488. GRAVEL GUARD 487. PREPAIL SIDE PANEL 490. CAUTIONARY MICASURES TO PREVENT QUARTER GLASS DAMAGE 491. GLASS OPEN FLANGE DAMAGE TROM CUT KNIFE, REPAIR 492. QUARTER GLASS INSTALLATION KIT 493. REMOVE CAULKING AND SEAM SEALER 494. REPLACE CAULKING AND SEAM SEALER 495. LONDERCOAT SIDE PANEL 496. CAVITY WAX 497. WELD-THRU PRIMER 498. SOUND DEADENER SPRAYABLE SEALER 499. EXPANSION FOAM SEAM SEALER 499. EXPANSION FOAM SEAM SEALER 499. EXPANSION FOAM SEAM SEALER 590. RETEATE ADDIESTIVE MOLDINGS 501. REPLACE CAULKING AND SEAM SEALER 591. RETEATE STEELES 502. ICASI SET THE PAIR ATTACHED/ADJACENT TO SIDE PANEL 594. EXPANSION FOAM SEAM SEALER 595. PRINCATE SIDE PANEL SLEEVES 506. REI SEAT SET FIT PARTS ATTACHED/ADJACENT TO SIDE PANEL 596. RETEATE SEATER SEATER SEATER SEATER 597. RELIGIOUS FOR THE SEATER SEATER SEATER SEATER 598. RECOVER TREON 599. EXPANSION FOAM (SEATER SEATER SEATER 590. RELIGATE SIDE PANEL SLEEVES 590. RELIGATE SIDE PANEL SLEEVES 591. RELIGATE SIDE PANEL SLEEVES 592. RELIGATE SIDE PANEL SLEEVES 593. REST HIT PARTS ATTACHED/ADJACENT TO SIDE PANEL 594. REST FOR CAULKING AND SEAM SEALER 595. RELIGATE SUCK SEATER SEATE		
475. EDOSEN AND FREE RUSTED/STUCK BOLTS 476. REPAIR CAP. RAIL FLANGE, REMOVAL DISTORTION 477. EXPANSION FOAM (PER TUBE) 478. REPAIR FRONT BED PANEL 479. REPAIR FRONT BED PANEL 480. REPAIR REAR SILL PANEL 480. REPAIR REAR SILL PANEL 481. SPOT PAINT INNER BED PANEL 482. MASK WEAP WIRE HARNESS 483. MASK BED INTERIOR 484. MASK FOR PRIMER APPLICATION 485. SPOT PAINT TRONT BED PANEL 486. SPOT PAINT TRONT BED PANEL 487. REFINISH TWO TONE BLACK OUT 488. GRAVEL GUARD 487. REFINISH TWO TONE BLACK OUT 488. GRAVEL GUARD 489. PRE-PULL SIDE PANEL 490. CAUTIONARY MEASURES TO PREVENT QUARTER GLASS DAMAGE 491. GLASS OPEN HANGE DAMAGE FROM CUT KNIFE. REPAIR 492. QUARTER GLASS INSTALLATION RIT 493. REMOVE CAULKING AND SEAM SEALER 494. REPLACE CAULKING AND SEAM SEALER 495. LUNDERCOAT SIDE PANEL 496. CAVITY WAX 497. WELD THRU PRIMER 498. SOUND DEADENER SPRAYABLE SEALER 499. EXPANSION FOAM (PER TUBE) 500. CLEAN & RETARE ADHESINE MOLDINGS 501. REPLACE WHEEL FLARE FASTENERS & ADHESIVE STRIP 502. FABRICATE SIDE PANEL SLEEVES 503. TEST FLARTS ATTACHOLDINGS 505. RELOCKER FROM 506. RAIS ESALT S 507. RAI SEAT BELT-S 508. RECOVER FROM 509. EVACUATE & RECHARGE AC "SEPARATE FROM FRONT A/C" 510. REI REAR SEATE S 507. REL SEATE S 508. RECOVER FROM 509. EVACUATE & RECHARGE AC "SEPARATE FROM FRONT A/C" 510. REI REAR GRAND FLOW HINTER SIDE S 511. HILL & REFAIR HER REPAIR S 515. WHELL OF HAR FLOW HELD AREA REPAIR 515. WHELL OF HAR FLOW HELD AREA REPAIR 516. CLEAN HELD AND BELRY WELD AREA REPAIR 517. HURLER OF HAR HELD AND BELRY WELD AREA REPAIR 518. HILL & REFAIR HELD RELAK ON PROMISED S 519. HARRE PAREL DISTORTION DUE TO ADHESIVE, REPAIR 510. HARRE PANEL DISTORTION DUE TO ADHESIVE, REPAIR 511. HURLER ACHARGE AC "SEPARATE FROM FRONT A/C" 512. REAR SILL AT WELD AREA REPAIR 515. WHELL OPEN HINTER SILD AGENER 516. CLEAN HELD AND DEBRUK WELD AREA	473. FEATHER & FILL WELDS	
475. REPAIR CAP-RAIL FLANGE, REMOVAL DISTORTION 477. EXPANSION FOAM (PER TUBE) 478. REPAIR FRONT BED PANEL 479. REPAIR INNER BED PANEL 480. REPAIR REAR SILL PANEL 481. SPOT PAINT INNER BED PANEL 482. MASK WEAP WIRE HARNESS 483. MASK BED INTERIOR 484. MASK FOR PRIMER APPLICATION 485. SPOT PAINT FRONT BED PANEL 486. SPOT PAINT FRONT BED PANEL 487. REFINISH TWO TONE BLACK OUT 488. GRAVEL CUARD 487. REFINISH TWO TONE BLACK OUT 489. PRE-PULL SIDE PANEL 489. PRE-PULL SIDE PANEL 489. CAPAUT GUARD 489. CAUTIONARY MEASURES TO PREVENT QUARTER GLASS DAMAGE 491. GLASS OPEN FLANGE DAMAGE FROM CUT KNIFE, REPAIR 494. REPLACE CAULKING AND SEAM SEALER 494. REPLACE CAULKING AND SEAM SEALER 495. LINDROVE CAULKING AND SEAM SEALER 496. CAVITY WAX 497. WELD-THRU PRIMER 498. SOUND EDADENER SPRAYABLE SEALER 499. SUND EDADENER SPRAYABLE SEALER 500. CLEAN & RETARE ADHESIVE MOLDINGS 501. REPLACE WHEEL FLARE FASTENERS & ADHESIVE STRIP 502. FABRICATE SIDE PANEL SLEEVES 503. TEST IT PARETS ATTACHORDADIACENT TO SIDE PANEL 504. RSI SPECIALITY INTERIOR 505. PULL BACK WIRE HARNESS 506. RSI SEALT BLIT-S 507. RSI SEAT BELT-S 508. RECOVER FRON 511. PULL BACK CARPET AND FLOOR INSULATION 512. REAR SILL AT WELD AREA, REPAIR 514. INNER PANEL DISTORTION DUE TO ADHESIVE, REPAIR 515. WHEEL OPEN INNER STRUCTURE, REPAIR 516. CLEAN FILE AND DEBUR WELD AREA	474. COLATERAL DAMAGE FROM THE REPAIR PROCESS (BUILD SEQUENCE)	
477 EXPANSION FOAM (PER TUBE) 478 REPAIR FRONT BED PANEL 479 REPAIR INNER BED PANEL 480 REPAIR REAS SILL PANEL 481 SPOT PAINT INNER BED PANEL 482 MASK WAPP WIRE HARNESS 483 MASK BED INTERIOR 484 MASK OR PRIMER APPLICATION 485 SPOT PAINT FRONT BED PANEL 487 REFINISH TWO TOME BLACK OUT 486 SPOT PAINT REAS SILL PANEL 487 REFINISH TWO TOME BLACK OUT 488 GRAVEL GUARD 487 PER PULL SIDE PANEL 489 PER PULL SIDE PANEL 490 CAUTIONARY MEASURES TO PREVENT OUARTER GLASS DAMAGE 491 GLASS OPEN FLANGE DAMAGE FROM CUT KNIFE, REPAIR 492 QUARTER GLASS INSTALLATION KIT 493 REMOVE CAULKING AND SEAM SEALER (PER TUBE) 494 REPLACE CAULKING AND SEAM SEALER (PER TUBE) 495 UNDERCOAT SIDE PANEL 497 WED-THRU PRIMER 498 SOUND DEADERE SPRAVABLE SEALER 498 SOUND DEADERE SPRAVABLE SEALER 499 SOUND DEADERE SPRAVABLE SEALER 499 SUND DEADERE SPRAVABLE SEALER 499 SOUND DEADERE SPRAVABLE SEALER 490 SOUND DEADERE SPRAVABLE SEALER 491 SOUND DEADERE SPRAVABLE SEALER 491 SOUND DEADERE SPRAVABLE SEALER 491 SEALER SEALER 491 SEALER SEALER 491 SEALER SEALER 49	475. LOOSEN AND FREE RUSTED/STUCK BOLTS	
479. REPAIR FRONT BED PANEL 479. REPAIR INNER BED PANEL 480. REPAIR REAR SILL PANEL 481. SPOT PAINT INNER BED PANEL 482. MASK WARP WIRE HARNESS 483. MASK BED INTERIOR 484. MASK FOR PRIMER APPLICATION 485. SPOT PAINT FRONT BED PANEL 486. SPOT PAINT REAR SILL PANEL 486. SPOT PAINT REAR SILL PANEL 487. REFINISH TWO TONE BLACK OUT 488. GRAVEL GUARD 489. PRE-PULL SIDE PANEL 490. CAUTIONARY MEASURES TO PREVENT QUARTER GLASS DAMAGE 491. GLASS OPEN FLANCE DAMAGE FROM CUT KNIFE, REPAIR 492. QUARTER GLASS INSTALLATION KIT 493. REMOVE CAULKING AND SEAM SEALER 494. REPLACE CAULKING AND SEAM SEALER 495. LINDERCOAT SIDE PANEL 496. CAUTIV WAX 497. WELD-THRU PRIMER 498. SOUND DEADENER SPRAYABLE SEALER 499. EXPANSION FOAM (PER TUBE) 500. CLEAN & RETAIPE OADENER SEALER 499. EXPANSION FOAM (PER TUBE) 501. REPLACE WHEEL FLARE FASTENERS & ADHESIVE STRIP 502. FABRICATE SIDE PANEL SELEVES 503. TEST IT PARTS ATTACHED/ADJACENT TO SIDE PANEL 504. RSI SPECIALITY INTERIOR 505. PULL BACK WARE HARNESS 506. RSI SEAT-S 507. RSI SEAT BELT-S 508. RECOVER FROM 509. EVACUATE & RECHARGE AC "SEPARATE FROM FRONT A/C" 510. RSI SEAT BELT-S 509. RECOVER FROM 511. RIVER BACK CARPET AND FLOOR INSULATION 512. REAR SILL AT WELD AREA, REPAIR 514. NINER PANEL DETORNING SURVEY, REPAIR 515. WHEEL OPEN INNER STRUCTURE, REPAIR 516. CLEAN FLEAR FARTENER SERVED 517. KILL SEARCH SEATER FROM FRONT A/C" 518. REAR SILL AT WELD AREA, REPAIR 519. HAR SEATER FROM FRONT A/C" 519. RIVER FRANCE STORD FOOR INSULATION 510. RIVER FRANCE STORD FOOR INSULATION 511. RIVER PANEL DISTORTION DUE TO ADHESIVE, REPAIR 516. CLEAN FLEAR FARTENER SERVED 517. KILL SHOR FOR THE STRUCTURE, REPAIR 516. CLEAN FLEAR FAND FLOOR INSULATION 517. REPAIR FARTER FARTENER FROM FRONT A/C" 519. RIVER FRANCE STORD FOOR INSULATION 510. RIVER FRANCE STORD FOOR INSULATION 511. RIVER FAND FLOOR INSULATION 512. REAR SILL AT WELD AREA, REPAIR 514. INTERPANEL DISTORTION DUE TO ADHESIVE, REPAIR 515. WHEEL OPEN INNER STRUCTURE, REPAIR		
479. REPAIR INNER BED PANEL 480. REPAIR REAR SILL PANEL 481. SPOT PAINT INNER BED PANEL 482. MASK WARP WIRE HARNESS 483. MASK BED INTERIOR 484. MASK FOR PRIMER APPLICATION 485. SPOT PAINT FRONT BED PANEL 487. REFINISH TWO TONE BLACK OUT 488. GRAVEL GUARD 487. REFINISH TWO TONE BLACK OUT 488. GRAVEL GUARD 489. PRE-PULL SIDE PANEL 489. PRE-PULL SIDE PANEL 490. CAUTIONARY MEASURES TO PREVENT QUARTER GLASS DAMAGE 491. GLASS OPEN FLANGE DAMAGE FROM GUT KNIFE, REPAIR 492. QUARTER GLASS INSTALLATION KIT 493. REMOVE CAULKING AND SEAM SEALER 494. REPLACE CAULKING AND SEAM SEALER 495. LOUDERCOAT SIDE PANEL 496. CAUTY WAX 497. WELD-THRUP PRIMER 498. SQUIND DEADERRS PRAYABLE SEALER 499. EXPANSION FOAM, GREE TUBE) 500. CLEAN & RETAPE ADHESIVE MOLDINGS 501. REPLACE WHEEL FLARE FASTENERS & ADHESIVE STRIP 502. FABRICATE SIDE PANEL SLEEVES 503. TEST FIT PARTS ATTACHED/ADJACENT TO SIDE PANEL 504. RAI SPECIALITY INTERIOR 505. PULL BACK WIRE HARNESS 506. RELOVER FROM SEAM SESPARE SEALER 507. RAI SEATIS SEATIS 507. RAI SEATIS LITE OF SEATIS SEATIS 508. RECOVER FROM 509. EVACUATE & RECHARGE AC "SEPARATE FROM FRONT A/C" 510. RAI SEATIS. 511. PULL-BACK CARPET AND FLOOR INSULATION 512. REAR SILL AT WILLD AREA, REPAIR 513. FILL & FEATIF REPAIR STRIP SILL AND FLOOR INSULATION 514. INNER PANEL DISTORTION DUE TO ADHESIVE, REPAIR 515. WHEEL OPEN INNER STRUCTURE, REPAIR 516. CLEAN FILE AND DEBUR WILLD AREA	477. EXPANSION FOAM (PER TUBE)	
480. REPAIR REAR SILL PANEL 481. SPOT PAINT INNER BED PANEL 482. MASK WRAP WIRE HARNESS 483. MASK BED INTERIOR 484. MASK OF PRIMER APPLICATION 485. SPOT PAINT FRONT BED PANEL 486. SPOT PAINT FRONT BED PANEL 487. REFINISH TWO TONE BLACK OUT 488. GRAVEL GUARD 487. REFINISH TWO TONE BLACK OUT 488. GRAVEL GUARD 489. PRE-PULL SIDE PANEL 490. CAUTIONARY MEASURES TO PREVENT QUARTER GLASS DAMAGE 491. GLASS OPEN HANGE DAMAGE FROM CUT KNIFE, REPAIR 492. QUARTER GLASS INSTALLATION KIT 493. REMOVE CAULKING AND SEAM SEALER 494. REPLACE CAULKING AND SEAM SEALER 494. REPLACE CAULKING AND SEAM SEALER 495. UNDRENCOAT SIDE PANEL 496. CAUTT WAX 497. WELD-THUR PRIMER 498. SOUND DEADENER SPRAYABLE SEALER 499. SOUND DEADENER SPRAYABLE SEALER 499. SUND FANE SEAM (PER TUBE) 500. CLEAN & RETAPE ADHESIVE MOLDINGS 501. REPLACE WHEEL FLARE FASTENERS & ADHESIVE STRIP 502. FABRICATE SIDE PANEL SLEEVES 503. TEST HT PARTS ATTACHED/ADJACENT TO SIDE PANEL 504. R&I SPECIALITY INTERIOR 505. PULL BACK WIRE HARNESS 506. R&I SEAT-S 507. R&I SEAT BALTS 508. R&COVER FROM 509. EVACUATE & RECHARGE AC "SEPARATE FROM FRONT A/C" 509. EVACUATE & RECHARGE AC "SEPARATE FROM FRONT A/C" 509. RECOVER FREON 501. REIR SEAT HAT FROM FROM FROM TA/C" 503. REST SEAT HAT STATICHED ADDIACENT TO SIDE PANEL 504. R&I SECTIALITY INTERIOR 505. PULL BACK WIRE HARNESS 506. R&I SEAT-S 507. R&I SEAT BELT-S 508. R&COVER FREON 509. EVACUATE & RECHARGE AC "SEPARATE FROM FRONT A/C" 509. EVACUATE & RECHARGE AC "SEPARATE FROM FRONT A/C" 509. EVACUATE & RECHARGE AC "SEPARATE FROM FRONT A/C" 501. R&I REAR HEATER/AC COMPONENTS 503. TEST IT DARTS ATTACHED ADDIACENT TO SIDE PANEL 504. R&I SEAT HATER FASTE COMPONENTS 505. RELIGIBLE TO THE DARK ARPAIR 506. RELOVER FREON 507. HEATER FASTEN FROM FRONT A/C" 509. EVACUATE & RECHARGE AC "SEPARATE FROM FRONT A/C" 509. EVACUATE & RECHARGE AC "SEPARATE FROM FRONT A/C" 509. FOR HEATER FASTEN FROM FRONT A/C" 509. FOR HEATER AND FLOOR INSULATION 509. FOR HEATER FASTEN FROM FRONT A/C" 509. FOR HEATER FASTEN FROM FRONT A/C" 509. FOR HEATER FASTEN FROM FR		
481. SPOT PAINT INNER BED PANEL 482. MASK WRAP WIRE HARNESS 483. MASK BED INTERIOR 484. MASK FOR PRIMER APPLICATION 485. SPOT PAINT FRONT BED PANEL 486. SPOT PAINT FRONT BED PANEL 487. REFINISH TWO TONE BLACK OUT 488. GRAVEL GUARD 487. REFINISH TWO TONE BLACK OUT 488. GRAVEL GUARD 489. PRE-PULL SIDE PANEL 490. CAUTIONARY MEASURES TO PREVENT QUARTER GLASS DAMAGE 491. GLASS OPEN FLANGE DAMAGE FROM CUT KNIFE, REPAIR 492. QUARTER GLASS INSTALLATION KIT 493. REMOVE CAULKING AND SEAM SEALER 494. REPLACE CAULKING AND SEAM SEALER 495. LOUDERCOAT SIDE PANEL 496. CAUTY WAX 497. WELD-THRU PRIMER 498. SOUND DEADENER SPRAYABLE SEALER 499. EXPANSION FOAM (PER TUBE) 500. CLEAN & RETAPE ADHESIVE MOLDINGS 501. REPLACE WHEEL FLARE FASTENERS & ADHESIVE STRIP 502. FABRICATE SIDE PANEL 503. TEST FIT PARTS ATTACHED/ADJACENT TO SIDE PANEL 504. RSI SPECIALITY INTERIOR 505. PULL BACK WIRE HARNESS 506. RSI SEAT-S 507. RSI SEAT SET. 507. RSI SEAT BELT-S 508. RECOVER FREON 509. EVACUATE & RECHARGE AC "SEPARATE FROM FRONT A/C" 510. RAIL SEAT BELT-S 501. RSI SEAT BELT-S 502. RABRICATE SOUR PANEL 511. PULL-BACK CARPET AND FLOOR INSULATION 512. REAR SILL AT WELD AREA, REPAIR 513. FILL & REATHER WELD SIDE ON THE SIDE ON	479. REPAIR INNER BED PANEL	
482. MASK WRAP WIRE HARNESS 483. MASK BED INITERIOR 484. MASK FOR PRIMER APPLICATION 485. SPOT PAINT FRONT BED PANEL 486. SPOT PAINT REAR SILL PANEL 486. SPOT PAINT REAR SILL PANEL 487. REFINISH TWO TONE BLACK OUT 488. GRAVEL GUARD 487. REFINISH TWO TONE BLACK OUT 488. GRAVEL GUARD 489. PRE-PULL SIDE PANEL 490. CAUTIONARY MEASURES TO PREVENT QUARTER GLASS DAMAGE 491. GLASS OPEN FLANGE DAMAGE FROM CUT KNIFE, REPAIR 492. QUARTER GLASS INSTALLATION KIT 493. REMOVE CAULKING AND SEAM SEALER 494. REPLACE CAULKING AND SEAM SEALER 494. REPLACE CAULKING AND SEAM SEALER 495. SUNDER COAT SIDE PANEL 496. CAVITY WAX 497. WELD-THRU PRIMER 498. SOUND DE ADENERS SPRAYABLE SEALER 499. EXPANSION FOAM (PER TUBE) 500. CLEAN & RETAPE ADHESIVE MOLDINGS 501. REPLACE WHELE FLARE FASTENERS & ADHESIVE STRIP 502. FABRICATE SIDE PANEL SLEEVES 503. TEST HIT PARTS A TTACHED/ADJACENT TO SIDE PANEL 504. REI SPECIALITY INTERIOR 505. PULL BACK WIRE HARNESS 506. RSI SEAT-S 507. RSI SEAT-S 507. RSI SEAT-S 507. RSI SEAT-S 508. RECOVER FREON 509. EVACUATE & RECHARGE AC "SEPARATE FROM FRONT A/C" 510. RSI REAR HEATER/AC COMPONENTS 511. PULL-BACK CARPET AND FLOOR INSULATION 512. REAR SILL AT WELD AREA, REPAIR 515. WHEEL OPEN INNER STRUCTURE, REPAIR 516. CLEAN FILE AND DEBUR WELD AREA	480. REPAIR REAR SILL PANEL	
483. MASK BED INTERIOR 484. MASK FOR PRINER APPLICATION 485. SPOT PAINT REON BED PANEL 486. SPOT PAINT REAR SILL PANEL 487. REFINISH TWO TONE BLACK OUT 488. GRAVEL GUARD 85 - VAN/SUV SIDE PANEL: 489. PRE-PULL SIDE PANEL 490. CAUTIONARY MEASURES TO PREVENT QUARTER GLASS DAMAGE 491. GLASS OPEN FLANGE DAMAGE FROM CUT KNIFE, REPAIR 492. QUARTER GLASS INSTALLATION KIT 493. REMOVE CAULKING AND SEAM SEALER 494. REPLACE CAULKING AND SEAM SEALER 495. UNDERCOAT SIDE PANEL 496. CAVITY WAX 497. WELD-THRU PRIMER 498. SOUND DEADENER SPRAYABLE SEALER 499. EXPANSION FOAM (PER TUBE) 500. CLEAN AR ETAPE ADHESIVE MOLDINGS 501. REPLACE WHEEL FLARE FASTENERS & ADHESIVE STRIP 502. FABRICATE SIDE PANEL SLEEVES 503. TEST EIT PARTS ATTACHED/ADJACENT TO SIDE PANEL 504. RAI SPECIALITY INTERIOR 505. PULL BACK WIRE HARNESS 506. RAIL SEALT-S 507. RAI SEAT BELT-S 508. RECOVER FREON 509. EVACUALE & RECHARGE AC "SEPARATE FROM FRONT A/C" 510. RAI REAR HAETER/AC COMPONENTS 511. PULL-BACK CARPET AND FLOOR INSULATION 512. REAR SILL AT WELD AREA, REPAIR 513. FILL & FEATHER WELD STORM INNER STRUCTURE, REPAIR 514. INNER PANEL DISTORTION OUR TO ADHESIVE, REPAIR 515. WHEEL OPEN INNER STRUCTURE, REPAIR 516. CLEAN FILE AND DEDING WILLD ADHESIVE, REPAIR 517. MINER PANEL DISTORTION OUR TO ADHESIVE, REPAIR 516. CLEAN FILE AND DEDING WILLD ADHESIVE, REPAIR 517. MINER PANEL DISTORTION OUR TO ADHESIVE, REPAIR 518. WHEEL OPEN INNER STRUCTURE, REPAIR		
484. MASK FOR PRIMER APPLICATION 485. SPOT PAINT FRONT BED PANEL 486. SPOT PAINT REAR SILL PANEL 487. REFINISH TWO TONE BLACK OUT 488. GRAVEL GUARD 85 - VAN/SUV SIDE PANEL: 489. PRE-PULL SIDE PANEL: 499. PRE-PULL SIDE PANEL 490. CAUTIONARY MEASURES TO PREVENT QUARTER GLASS DAMAGE 491. GLASS OPEN FLANGE DAMAGE FROM CUT KNIFE, REPAIR 491. GLASS OPEN FLANGE DAMAGE FROM CUT KNIFE, REPAIR 492. QUARTER GLASS INSTALLATION KIT 493. REMOVE CAULKING AND SEAM SEALER 494. REPLACE CAULKING AND SEAM SEALER 495. UNDERCOAT SIDE PANEL 496. CAVITY WAX 497. WELD-THRU PRIMER 498. SOUND DEADENER SPRAYABLE SEALER 499. EXPANSION FOAM (PER TUBE) 500. CLEAN & RETAPE ADHESIVE MOLDINGS 501. REPLACE WHEEL FLARE FASTENERS & ADHESIVE STRIP 502. FABRICATE SIDE PANEL SLEEVES 503. TEST FIT PARTS ATTACHED/ADJACENT TO SIDE PANEL 504. RSI SPECIALITY INTERIOR 505. PULL BACK WIRE HARNESS 506. RSI SEAT-S 507. RSI SEAT BELT-S 508. RECOVER FREON 509. EVACUATE & RECHARGE AC "SEPARATE FROM FRONT A/C" 510. RSI FAR HEATER ACCOMPONENTS 511. PULL-BACK CAMPET AND FLOOR INSULATION 512. REAR SILL AT WELD AREA, COMPONENTS 513. FILL & FEATHER WELD S 514. INNER PANEL DISTORTION DUE TO ADHESIVE, REPAIR 515. WHEEL OPEN INNER STRUCTURE, REPAIR 516. CLEAN FILE AND DEBUR WELD AREA, 516. CLEAN FILE AND DEBUR WELD AREA, 517. MILER PANEL DISTORTION DUE TO ADHESIVE, REPAIR 516. CLEAN FILE AND DEBUR WELD AREA, 517. MILER PANEL DISTORTION DUE TO ADHESIVE, REPAIR 518. HILL & FEATHER WELD S 519. WHEEL OPEN INNER STRUCTURE, REPAIR 510. CLEAN FILE AND DEBUR WELD AREA, 511. HILL & FEATHER WELD S 512. WHEEL OPEN INNER STRUCTURE, REPAIR 515. WHEEL OPEN INNER STRUCTURE, REPAIR		
485. SPOT PAINT FRAR SILL PANEL 486. SPOT PAINT REAR SILL PANEL 487. REFINISH TWO TONE BLACK OUT 488. GRAVEL GUARD 85 - VAN/SUV SIDE PANEL: 489. PRE-PULL SIDE PANEL 490. CAUTIONARY MEASURES TO PREVENT QUARTER GLASS DAMAGE 491. GLASS OPEN FLANGE DAMAGE FROM CUT KNIFE, REPAIR 492. QUARTER GLASS INSTALLATION KIT 493. REMOVE CAULKING AND SEAM SEALER 494. REPLACE CAULKING AND SEAM SEALER 495. UNDERCOAT SIDE PANEL 495. UNDERCOAT SIDE PANEL 496. CAVITY WAX 497. WELD-THRU PRIMER 498. SOUND DEADENER SPRAYABLE SEALER 499. EXPANSION FOAM (PER TUBE) 500. CLEAN & RETAPE ADHESIVE MOLDINGS 501. REPLACE WHEEL FLARE FASTENERS & ADHESIVE STRIP 502. FABRICATE SIDE PANEL LELEVES 503. TEST FIT PARTS ATTACHED/ADJACENT TO SIDE PANEL 504. R&I SPECIALITY INTERIOR 505. PULL BACK WIRE HARNESS 506. R&I SEATAS 507. R&I SEAT BELT-S 508. RECOVER TRECON 509. EVACUATE & RECHARGE AC "SEPARATE FROM FRONT A/C" 510. R&I REAR HEATER/AC COMPONENTS 511. PULL-BACK CARPET AND FLOOR INSULATION 512. REAR SINCET SIDE PANEL SICH FOR SIDE OF AND	483. MASK BED INTERIOR	
486. SPOT PAINT REAR SILL PANEL 487. REFINISH TWO TONE BLACK OUT 488. GRAVEL GUARD 85 - VAN/SUV SIDE PANEL: 489. PRE-PULL SIDE PANEL 490. CAUTIONARY MEASURES TO PREVENT QUARTER GLASS DAMAGE 491. GLASS OPEN FLANGE DAMAGE FROM CUT KNIFE, REPAIR 492. QUARTER GLASS INSTALLATION KIT 493. REMOVE CAULKING AND SEAM SEALER 494. REPLACE CAULKING AND SEAM SEALER 494. REPLACE CAULKING AND SEAM SEALER 495. UNDERCOAT SIDE PANEL 495. UNDERCOAT SIDE PANEL 496. CAVITY WAX 497. WELD-THRU PRIMER 498. SOUND DEADENER SPRAYABLE SEALER 499. EXPANSION FOAM (PER TUBE) 500. CLEAN & RETAPE ADHESIVE MOLDINGS 501. REPLACE WHEEL FLARE FASTENERS & ADHESIVE STRIP 502. FABRICATE SIDE PANEL SLEEVES 503. TEST FIT PARTS ATTACHED/ADJACENT TO SIDE PANEL 504. RRI SPECIALITY INTERIOR 505. PULL BACK WIRE HARNESS 506. RRI SEAT-S 507. RRI SEAT BELT-S 508. RECOVER FREON 509. EVACUATE & RECHARGE AC "SEPARATE FROM FRONT A/C" 510. RRI REAR HEATER/AC COMPONENTS 511. PULL-BACK CARPET AND FLOOR INSULATION 512. REAR REATER/AC COMPONENTS 513. FILL & FEATHER WELDS 514. INNER PANEL DISTORTION DUE TO ADHESIVE, REPAIR 515. WHEEL OPEN INNER STRUCTURE, REPAIR 516. CLEAN FILE AND DEBUR WELD AREA	484. MASK FOR PRIMER APPLICATION	
488. GRAVEL GUARD 85 - VAN/SUV SIDE PANEL: 490. CAUTIONARY MEASURES TO PREVENT QUARTER GLASS DAMAGE 491. GLASS OPEN FLANGE DAMAGE FROM CUT KNIFE, REPAIR 492. QUARTER GLASS INSTALLATION KIT 493. REMOVE CAULKING AND SEAM SEALER 494. REPLACE CAULKING AND SEAM SEALER 495. UNDERCOAT SIDE PANEL 496. CAVITY WAX 497. WELD-THRU PRIMER 498. SOUND DEADENER SPRAYABLE SEALER 499. EXPANSION FOAM (PER TUBE) 500. CLEAN & RETAPE ADHESIVE MOLDINGS 501. REPLACE WHELE FLARE FASTENERS & ADHESIVE STRIP 502. FABRICATE SIDE PANEL SLEEVES 503. TEST FIT PARTS ATTACHED/ADJACENT TO SIDE PANEL 504. R&I SPECIALITY INTERIOR 505. PULL BACK WIRE HARNESS 506. R&I SEAT-S 507. R&I SEAT BELT-S 508. RECOVER FREON 509. EVACUATE & RECHARGE AC "SEPARATE FROM FRONT A/C" 510. R&I REAR HEATER/AC COMPONENTS 511. PULL-BACK CARPET AND FLOOR INSULATION 512. REAR ILL AT WELD AREA (SEPAIR 513. FILL & FEATHER WELDS 514. INNER PANEL DISTORTION DUE TO ADHESIVE, REPAIR 515. WHEEL OPEN INNER STRUCTURE, REPAIR 516. CLEAN FILE AND DEBUR WELD AREA		
488. GRAVEL GUARD 85 - VAN/SUV SIDE PANEL: 489. PRE-PULL SIDE PANEL 490. CAUTIONARY MEASURES TO PREVENT QUARTER GLASS DAMAGE 491. GLASS OPEN FLANGE DAMAGE FROM CUT KNIFE, REPAIR 492. QUARTER GLASS INSTALLATION KIT 493. REMOVE CAULKING AND SEAM SEALER 494. REPLACE CAULKING AND SEAM SEALER (PER TUBE) 495. UNDERCOAT SIDE PANEL 496. CAVITY WAX 497. WELD-THRU PRIMER 498. SOUND DEADENER SPRAYABLE SEALER 499. EXPANSION FOAM (PER TUBE) 500. CLEAN & RETAPE ADHESIVE MOLDINGS 501. REPLACE WHEEL FLARE FASTENERS & ADHESIVE STRIP 502. FABRICATE SIDE PANEL SLEEVES 503. TEST FIT PARTS ATTACHED/ADJACENT TO SIDE PANEL 505. PULL BACK WIRE HARNESS 506. R&I SEAT-S 507. R&I SEAT BELT-S 508. RECOVER FREON 509. EVACUATE & RECHARGE AC *SEPARATE FROM FRONT A/C* 510. R&I REAR HEATER/AC COMPONENTS 511. PULL-BACK CARPET AND FLOOR INSULATION 512. REAR SILL AT WELD AREA, REPAIR 513. FILL & FEATHER WELDS 514. INNER PANEL DISTORTION DUE TO ADHESIVE, REPAIR 515. WHEEL OPEN INNER STRUCTURE, REPAIR 516. CLEAN FILE AND DEBUR WELD AREA	486. SPOT PAINT REAR SILL PANEL	
85 - VAN/SUV SIDE PANEL: 489. PRE-PULL SIDE PANEL 490. CAUTIONARY MEASURES TO PREVENT QUARTER GLASS DAMAGE 491. GLASS OPEN FLANGE DAMAGE FROM CUT KNIFE, REPAIR 492. QUARTER GLASS INSTALLATION KIT 493. REMOVE CAULKING AND SEAM SEALER 494. REPLACE CAULKING AND SEAM SEALER (PER TUBE) 495. UNDERCOAT SIDE PANEL 496. CAVITY WAX 497. WELD-THRU PRIMER 498. SOUND DEADENER SPRAYABLE SEALER 499. EXPANSION FOAM (PER TUBE) 500. CLEAN & RETAPE ADHESIVE MOLDINGS 501. REPLACE WHEEL FLARE FASTENERS & ADHESIVE STRIP 502. FABRICATE SIDE PANEL SLEEVES 503. TEST FIT PARTS ATTACHED/ADJACENT TO SIDE PANEL 504. R&I SPECIALITY INTERIOR 505. PULL BACK WIRE HARNESS 506. R&I SEAT-S 507. R&I SEAT BELT-S 508. RECOVER FREON 509. EVACUATE & RECHARGE AC *SEPARATE FROM FRONT A/C* 510. R&I REAR HEATER/AC COMPONENTS 511. PULL-BACK CAPPET AND FLOOR INSULATION 512. REAR SILL AT WELD AREA, REPAIR 513. FILL NE FEATHER WELDSIS ON DUE TO ADHESIVE, REPAIR 514. INNER PANEL USTON THE AND DEBUR WELD AREA 516. CLEAN FILE AND DEBUR WELD AREA	487. REFINISH TWO TONE BLACK OUT	
489. PRE-PULL SIDE PANEL 490. CAUTIONARY MEASURES TO PREVENT QUARTER GLASS DAMAGE 491. GLASS OPEN FLANGE DAMAGE FROM CUT KNIFE, REPAIR 492. QUARTER GLASS INSTALLATION KIT 493. REMOVE CAULKING AND SEAM SEALER 494. REPLACE CAULKING AND SEAM SEALER 495. UNDERCOAT SIDE PANEL 496. CAVITY WAX 497. WELD-THRU PRIMER 498. SOUND DEADENER SPRAYABLE SEALER 499. EXPANSION FOAM (PER TUBE) 500. CLEAN & RETAPE ADHESIVE MOLDINGS 501. REPLACE WHEEL FLARE FASTENERS & ADHESIVE STRIP 502. FABRICATE SIDE PANEL SLEEVES 503. TEST FIT PARTS ATTACHED/ADJACENT TO SIDE PANEL 504. R&I SPECIALITY INTERIOR 505. PULL BACK WIRE HARNESS 506. R&I SEAT-S 507. R&I SEAT BELT-S 508. RECOVER FREON 509. EVACUATE & RECHARGE AC "SEPARATE FROM FRONT A/C" 510. R&I REAR HEATER/AC COMPONENTS 511. PULL-BACK CARPET AND FLOOR INSULATION 512. REAR SILL AT WELD AREA, REPAIR 513. FILL & FEATHER WELDS 514. INNER PANEL DISTORTION DUE TO ADHESIVE, REPAIR 515. WHEL OPEN INNER STRUCTURE, REPAIR 516. CLEAN FILE AND DEBUR WELD AREA	488. GRAVEL GUARD	
490. CAUTIONARY MEASURES TO PREVENT QUARTER GLASS DAMAGE 491. GLASS OPEN FLANGE DAMAGE FROM CUT KNIFE, REPAIR 492. QUARTER GLASS INSTALLATION KIT 493. REMOVE CAULKING AND SEAM SEALER 494. REPLACE CAULKING AND SEAM SEALER (PER TUBE) 495. UNDERCOAT SIDE PANEL 496. CAVITY WAX 497. WELD-THRU PRIMER 498. SOUND DEADENER SPRAYABLE SEALER 499. EXPANSION FOAM (PER TUBE) 500. CLEAN & RETAPE ADHESIVE MOLDINGS 501. REPLACE WHEEL FLARE FASTENERS & ADHESIVE STRIP 502. FABRICATE SIDE PANEL SLEEVES 503. TEST FIT PARTS ATTACHED/ADJACENT TO SIDE PANEL 504. RRI SPECIALITY INTERIOR 505. PULL BACK WIRE HARNESS 506. RRI SEAT-S 507. RRI SEAT-S 508. RECOVER FREON 509. EVACUATE & RECHARGE AC *SEPARATE FROM FRONT A/C* 510. RRI REAR HEATER/AC COMPONENTS 511. PULL-BACK CARPET AND FLOOR INSULATION 512. REAR SILL AT WELD AREA, REPAIR 513. FILL & FEATHER WELDS 514. INNER PANEL DISTORTION DUE TO ADHESIVE, REPAIR 515. WHEEL OPEN INNER STRUCTURE, REPAIR 516. CLEAN FILE AND DEBUR WELD AREA	85 - VAN/SUV SIDE PANEL:	
491. GLASS OPEN FLANGE DAMAGE FROM CUT KNIFE, REPAIR 492. QUARTER GLASS INSTALLATION KIT 493. REMOVE CAULKING AND SEAM SEALER 494. REPLACE CAULKING AND SEAM SEALER (PER TUBE) 495. UNDERCOAT SIDE PANEL 496. CAVITY WAX 497. WELD-THRU PRIMER 498. SOUND DEADENER SPRAYABLE SEALER 499. EXPANSION FOAM (PER TUBE) 500. CLEAN & RETAPE ADHESIVE MOLDINGS 501. REPLACE WHEEL FLARE FASTENERS & ADHESIVE STRIP 502. FABRICATE SIDE PANEL SLEEVES 503. TEST FIT PARTS ATTACHED/ADJACENT TO SIDE PANEL 504. R&I SPECIALITY INTERIOR 505. PULL BACK WIRE HARNESS 506. R&I SEAT-S 507. R&I SEAT BELT-S 508. RECOVER FREON 509. EVACUATE & RECHARGE AC *SEPARATE FROM FRONT A/C* 510. R&I REAR HEATER/AC COMPONENTS 511. PULL-BACK CARPET AND FLOOR INSULATION 512. REAR SILL AT WELD AREA, REPAIR 513. FILL & FEATHER WELDS 514. INNER PANEL DISTORTION DUE TO ADHESIVE, REPAIR 515. WHEEL OPEN INNER STRUCTURE, REPAIR 516. CLEAN FILE AND DEBUR WELD AREA	489. PRE-PULL SIDE PANEL	
492. QUARTER GLASS INSTALLATION KIT 493. REMOVE CAULKING AND SEAM SEALER 494. REPLACE CAULKING AND SEAM SEALER (PER TUBE) 495. UNDERCOAT SIDE PANEL 496. CAVITY WAX 497. WELD-THRU PRIMER 498. SOUND DEADENER SPRAYABLE SEALER 499. EXPANSION FOAM (PER TUBE) 500. CLEAN & RETAPE ADHESIVE MOLDINGS 501. REPLACE WHEEL FLARE FASTENERS & ADHESIVE STRIP 502. FABRICATE SIDE PANEL SLEEVES 503. TEST FIT PARTS ATTACHED/ADJACENT TO SIDE PANEL 504. R&I SPECIALITY INTERIOR 505. PULL BACK WIRE HARNESS 506. R&I SEAT-S 507. R&I SEAT BELT-S 508. RECOVER FREON 509. EVACUATE & RECHARGE AC *SEPARATE FROM FRONT A/C* 510. R&I REAR HEATER/AC COMPONENTS 511. PULL-BACK CARPET AND FLOOR INSULATION 512. REAR SILL AT WELD AREA, REPAIR 514. INNER PANEL DISTORTION DUE TO ADHESIVE, REPAIR 515. WHEEL OPEN INNER STRUCTURE, REPAIR 516. CLEAN FILE AND DEBUR WELD AREA	490. CAUTIONARY MEASURES TO PREVENT QUARTER GLASS DAMAGE	
493. REMOVE CAULKING AND SEAM SEALER 494. REPLACE CAULKING AND SEAM SEALER (PER TUBE) 495. UNDERCOAT SIDE PANEL 496. CAVITY WAX 497. WELD-THRU PRIMER 498. SOUND DEADENER SPRAYABLE SEALER 499. EXPANSION FOAM (PER TUBE) 500. CLEAN & RETAPE ADHESIVE MOLDINGS 501. REPLACE WHEEL FLARE FASTENERS & ADHESIVE STRIP 502. FABRICATE SIDE PANEL SLEEVES 503. TEST FIT PARTS ATTACHED/ADJACENT TO SIDE PANEL 504. R&I SPECIALITY INTERIOR 505. PULL BACK WIRE HARNESS 506. R&I SEAT-S 507. R&I SEAT BELT-S 508. RECOVER FREON 509. EVACUATE & RECHARGE AC *SEPARATE FROM FRONT A/C* 510. R&I REAR HEATER/AC COMPONENTS 511. PULL-BACK CARPET AND FLOOR INSULATION 512. REAR SILL AT WELD AREA, REPAIR 513. FILL & FEATHER WELDS 514. INNER PANEL DISTORTION DUE TO ADHESIVE, REPAIR 515. WHEEL OPEN INNER STRUCTURE, REPAIR 516. CLEAN FILE AND DEBUR WELD AREA	491. GLASS OPEN FLANGE DAMAGE FROM CUT KNIFE, REPAIR	
494. REPLACE CAULKING AND SEAM SEALER (PER TUBE) 495. UNDERCOAT SIDE PANEL 496. CAVITY WAX 497. WELD-THRU PRIMER 498. SOUND DEADENER SPRAYABLE SEALER 499. EXPANSION FOAM (PER TUBE) 500. CLEAN & RETAPE ADHESIVE MOLDINGS 501. REPLACE WHEEL FLARE FASTENERS & ADHESIVE STRIP 502. FABRICATE SIDE PANEL SLEEVES 503. TEST FIT PARTS ATTACHED/ADJACENT TO SIDE PANEL 504. R&I SPECIALITY INTERIOR 505. PULL BACK WIRE HARNESS 506. R&I SEAT-S 507. R&I SEAT BELT-S 508. RECOVER FREON 509. EVACUATE & RECHARGE AC *SEPARATE FROM FRONT A/C* 510. R&I REAR HEATER/AC COMPONENTS 511. PULL-BACK CARPET AND FLOOR INSULATION 512. REAR SILL AT WELD AREA, REPAIR 513. FILL & FEATHER WELDS 514. INNER PANEL DISTORTION DUE TO ADHESIVE, REPAIR 515. WHEEL OPEN INNER STRUCTURE, REPAIR 516. CLEAN FILE AND DEBUR WELD AREA	492. QUARTER GLASS INSTALLATION KIT	
495. UNDERCOAT SIDE PANEL 496. CAVITY WAX 497. WELD-THRU PRIMER 498. SOUND DEADENER SPRAYABLE SEALER 499. EXPANSION FOAM (PER TUBE) 500. CLEAN & RETAPE ADHESIVE MOLDINGS 501. REPLACE WHEEL FLARE FASTENERS & ADHESIVE STRIP 502. FABRICATE SIDE PANEL SLEEVES 503. TEST FIT PARTS ATTACHED/ADJACENT TO SIDE PANEL 504. R&I SPECIALITY INTERIOR 505. PULL BACK WIRE HARNESS 506. R&I SEAT-S 507. R&I SEAT BELT-S 508. RECOVER FREON 509. EVACUATE & RECHARGE AC *SEPARATE FROM FRONT A/C* 510. R&I REAR HEATER/AC COMPONENTS 511. PULL-BACK CARPET AND FLOOR INSULATION 512. REAR SILL A T WELD AREA, REPAIR 513. FILL & FEATHER WELDS 514. INNER PANEL DISTORTION DUE TO ADHESIVE, REPAIR 515. WHEEL OPEN INNER STRUCTURE, REPAIR 516. CLEAN FILE AND DEBUR WELD AREA	493. REMOVE CAULKING AND SEAM SEALER	
496. CAVITY WAX 497. WELD-THRU PRIMER 498. SOUND DEADENER SPRAYABLE SEALER 499. EXPANSION FOAM (PER TUBE) 500. CLEAN & RETAPE ADHESIVE MOLDINGS 501. REPLACE WHEEL FLARE FASTENERS & ADHESIVE STRIP 502. FABRICATE SIDE PANEL SLEEVES 503. TEST FIT PARTS ATTACHED/ADJACENT TO SIDE PANEL 504. R&I SPECIALITY INTERIOR 505. PULL BACK WIRE HARNESS 506. R&I SEAT-S 507. R&I SEAT BELT-S 508. RECOVER FREON 509. EVACUATE & RECHARGE AC *SEPARATE FROM FRONT A/C* 510. R&I REAR HEATER/AC COMPONENTS 511. PULL-BACK CARPET AND FLOOR INSULATION 512. REAR SILL AT WELD AREA, REPAIR 514. INNER PANEL DISTORTION DUE TO ADHESIVE, REPAIR 515. WHEEL OPEN INNER STRUCTURE, REPAIR 516. CLEAN FILE AND DEBUR WELD AREA	494. REPLACE CAULKING AND SEAM SEALER (PER TUBE)	
497. WELD-THRU PRIMER 498. SOUND DEADENER SPRAYABLE SEALER 499. EXPANSION FOAM (PER TUBE) 500. CLEAN & RETAPE ADHESIVE MOLDINGS 501. REPLACE WHEEL FLARE FASTENERS & ADHESIVE STRIP 502. FABRICATE SIDE PANEL SLEEVES 503. TEST FIT PARTS ATTACHED/ADJACENT TO SIDE PANEL 504. R&I SPECIALITY INTERIOR 505. PULL BACK WIRE HARNESS 506. R&I SEAT-S 507. R&I SEAT BELT-S 508. RECOVER FREON 509. EVACUATE & RECHARGE AC *SEPARATE FROM FRONT A/C* 510. R&I REAR HEATER/AC COMPONENTS 511. PULL-BACK CARPET AND FLOOR INSULATION 512. REAR SILL AT WELD AREA, REPAIR 513. FILL & FEATHER WELDS 514. INNER PANEL DISTORTION DUE TO ADHESIVE, REPAIR 515. WHEEL OPEN INNER STRUCTURE, REPAIR		
498. SOUND DEADENER SPRAYABLE SEALER 499. EXPANSION FOAM (PER TUBE) 500. CLEAN & RETAPE ADHESIVE MOLDINGS 501. REPLACE WHEEL FLARE FASTENERS & ADHESIVE STRIP 502. FABRICATE SIDE PANEL SLEEVES 503. TEST FIT PARTS ATTACHED/ADJACENT TO SIDE PANEL 504. R&I SPECIALITY INTERIOR 505. PULL BACK WIRE HARNESS 506. R&I SEAT-S 507. R&I SEAT BELT-S 508. RECOVER FREON 509. EVACUATE & RECHARGE AC *SEPARATE FROM FRONT A/C* 510. R&I REAR HEATER/AC COMPONENTS 511. PULL-BACK CARPET AND FLOOR INSULATION 512. REAR SILL AT WELD AREA, REPAIR 513. FILL & FEATHER WELDS 514. INNER PANEL DISTORTION DUE TO ADHESIVE, REPAIR 515. WHEEL OPEN INNER STRUCTURE, REPAIR		
499. EXPANSION FOAM (PER TUBE) 500. CLEAN & RETAPE ADHESIVE MOLDINGS 501. REPLACE WHEEL FLARE FASTENERS & ADHESIVE STRIP 502. FABRICATE SIDE PANEL SLEEVES 503. TEST FIT PARTS ATTACHED/ADJACENT TO SIDE PANEL 504. R&I SPECIALITY INTERIOR 505. PULL BACK WIRE HARNESS 506. R&I SEAT-S 507. R&I SEAT BELT-S 508. RECOVER FREON 509. EVACUATE & RECHARGE AC *SEPARATE FROM FRONT A/C* 510. R&I REAR HEATER/AC COMPONENTS 511. PULL-BACK CARPET AND FLOOR INSULATION 512. REAR SILL AT WELD AREA, REPAIR 513. FILL & FEATHER WELDS 514. INNER PANEL DISTORTION DUE TO ADHESIVE, REPAIR 515. WHEEL OPEN INNER STRUCTURE, REPAIR 516. CLEAN FILE AND DEBUR WELD AREA		
500. CLEAN & RETAPE ADHESIVE MOLDINGS 501. REPLACE WHEEL FLARE FASTENERS & ADHESIVE STRIP 502. FABRICATE SIDE PANEL SLEEVES 503. TEST FIT PARTS ATTACHED/ADJACENT TO SIDE PANEL 504. R&I SPECIALITY INTERIOR 505. PULL BACK WIRE HARNESS 506. R&I SEAT-S 507. R&I SEAT BELT-S 508. RECOVER FREON 509. EVACUATE & RECHARGE AC *SEPARATE FROM FRONT A/C* 510. R&I REAR HEATER/AC COMPONENTS 511. PULL-BACK CARPET AND FLOOR INSULATION 512. REAR SILL AT WELD AREA, REPAIR 513. FILL & FEATHER WELDS 514. INNER PANEL DISTORTION DUE TO ADHESIVE, REPAIR 515. WHEEL OPEN INNER STRUCTURE, REPAIR		
501. REPLACE WHEEL FLARE FASTENERS & ADHESIVE STRIP 502. FABRICATE SIDE PANEL SLEEVES 503. TEST FIT PARTS ATTACHED/ADJACENT TO SIDE PANEL 504. R&I SPECIALITY INTERIOR 505. PULL BACK WIRE HARNESS 506. R&I SEAT-S 507. R&I SEAT BELT-S 508. RECOVER FREON 509. EVACUATE & RECHARGE AC *SEPARATE FROM FRONT A/C* 510. R&I REAR HEATER/AC COMPONENTS 511. PULL-BACK CARPET AND FLOOR INSULATION 512. REAR SILL AT WELD AREA, REPAIR 513. FILL & FEATHER WELDS 514. INNER PANEL DISTORTION DUE TO ADHESIVE, REPAIR 515. WHEEL OPEN INNER STRUCTURE, REPAIR 516. CLEAN FILE AND DEBUR WELD AREA	,	
502. FABRICATE SIDE PANEL SLEEVES 503. TEST FIT PARTS ATTACHED/ADJACENT TO SIDE PANEL 504. R&I SPECIALITY INTERIOR 505. PULL BACK WIRE HARNESS 506. R&I SEAT-S 507. R&I SEAT BELT-S 508. RECOVER FREON 509. EVACUATE & RECHARGE AC *SEPARATE FROM FRONT A/C* 510. R&I REAR HEATER/AC COMPONENTS 511. PULL-BACK CARPET AND FLOOR INSULATION 512. REAR SILL AT WELD AREA, REPAIR 513. FILL & FEATHER WELDS 514. INNER PANEL DISTORTION DUE TO ADHESIVE, REPAIR 515. WHEEL OPEN INNER STRUCTURE, REPAIR 516. CLEAN FILE AND DEBUR WELD AREA		
503. TEST FIT PARTS ATTACHED/ADJACENT TO SIDE PANEL 504. R&I SPECIALITY INTERIOR 505. PULL BACK WIRE HARNESS 506. R&I SEAT-S 507. R&I SEAT BELT-S 508. RECOVER FREON 509. EVACUATE & RECHARGE AC *SEPARATE FROM FRONT A/C* 510. R&I REAR HEATER/AC COMPONENTS 511. PULL-BACK CARPET AND FLOOR INSULATION 512. REAR SILL AT WELD AREA, REPAIR 513. FILL & FEATHER WELDS 514. INNER PANEL DISTORTION DUE TO ADHESIVE, REPAIR 515. WHEEL OPEN INNER STRUCTURE, REPAIR 516. CLEAN FILE AND DEBUR WELD AREA	501. REPLACE WHEEL FLARE FASTENERS & ADHESIVE STRIP	
504. R&I SPECIALITY INTERIOR 505. PULL BACK WIRE HARNESS 506. R&I SEAT-S 507. R&I SEAT BELT-S 508. RECOVER FREON 509. EVACUATE & RECHARGE AC *SEPARATE FROM FRONT A/C* 510. R&I REAR HEATER/AC COMPONENTS 511. PULL-BACK CARPET AND FLOOR INSULATION 512. REAR SILL AT WELD AREA, REPAIR 513. FILL & FEATHER WELDS 514. INNER PANEL DISTORTION DUE TO ADHESIVE, REPAIR 515. WHEEL OPEN INNER STRUCTURE, REPAIR 516. CLEAN FILE AND DEBUR WELD AREA	502. FABRICATE SIDE PANEL SLEEVES	
505. PULL BACK WIRE HARNESS 506. R&I SEAT-S 507. R&I SEAT BELT-S 508. RECOVER FREON 509. EVACUATE & RECHARGE AC *SEPARATE FROM FRONT A/C* 510. R&I REAR HEATER/AC COMPONENTS 511. PULL-BACK CARPET AND FLOOR INSULATION 512. REAR SILL AT WELD AREA, REPAIR 513. FILL & FEATHER WELDS 514. INNER PANEL DISTORTION DUE TO ADHESIVE, REPAIR 515. WHEEL OPEN INNER STRUCTURE, REPAIR 516. CLEAN FILE AND DEBUR WELD AREA	503. TEST FIT PARTS ATTACHED/ADJACENT TO SIDE PANEL	
506. R&I SEAT-S 507. R&I SEAT BELT-S 508. RECOVER FREON 509. EVACUATE & RECHARGE AC *SEPARATE FROM FRONT A/C* 510. R&I REAR HEATER/AC COMPONENTS 511. PULL-BACK CARPET AND FLOOR INSULATION 512. REAR SILL AT WELD AREA, REPAIR 513. FILL & FEATHER WELDS 514. INNER PANEL DISTORTION DUE TO ADHESIVE, REPAIR 515. WHEEL OPEN INNER STRUCTURE, REPAIR 516. CLEAN FILE AND DEBUR WELD AREA	504. R&I SPECIALITY INTERIOR	
507. R&I SEAT BELT-S 508. RECOVER FREON 509. EVACUATE & RECHARGE AC *SEPARATE FROM FRONT A/C* 510. R&I REAR HEATER/AC COMPONENTS 511. PULL-BACK CARPET AND FLOOR INSULATION 512. REAR SILL AT WELD AREA, REPAIR 513. FILL & FEATHER WELDS 514. INNER PANEL DISTORTION DUE TO ADHESIVE, REPAIR 515. WHEEL OPEN INNER STRUCTURE, REPAIR 516. CLEAN FILE AND DEBUR WELD AREA	505. PULL BACK WIRE HARNESS	
508. RECOVER FREON 509. EVACUATE & RECHARGE AC *SEPARATE FROM FRONT A/C* 510. R&I REAR HEATER/AC COMPONENTS 511. PULL-BACK CARPET AND FLOOR INSULATION 512. REAR SILL AT WELD AREA, REPAIR 513. FILL & FEATHER WELDS 514. INNER PANEL DISTORTION DUE TO ADHESIVE, REPAIR 515. WHEEL OPEN INNER STRUCTURE, REPAIR 516. CLEAN FILE AND DEBUR WELD AREA		
509. EVACUATE & RECHARGE AC *SEPARATE FROM FRONT A/C* 510. R&I REAR HEATER/AC COMPONENTS 511. PULL-BACK CARPET AND FLOOR INSULATION 512. REAR SILL AT WELD AREA, REPAIR 513. FILL & FEATHER WELDS 514. INNER PANEL DISTORTION DUE TO ADHESIVE, REPAIR 515. WHEEL OPEN INNER STRUCTURE, REPAIR 516. CLEAN FILE AND DEBUR WELD AREA	507. R&I SEAT BELT-S	
510. R&I REAR HEATER/AC COMPONENTS 511. PULL-BACK CARPET AND FLOOR INSULATION 512. REAR SILL AT WELD AREA, REPAIR 513. FILL & FEATHER WELDS 514. INNER PANEL DISTORTION DUE TO ADHESIVE, REPAIR 515. WHEEL OPEN INNER STRUCTURE, REPAIR 516. CLEAN FILE AND DEBUR WELD AREA		
511. PULL-BACK CARPET AND FLOOR INSULATION 512. REAR SILL AT WELD AREA, REPAIR 513. FILL & FEATHER WELDS 514. INNER PANEL DISTORTION DUE TO ADHESIVE, REPAIR 515. WHEEL OPEN INNER STRUCTURE, REPAIR 516. CLEAN FILE AND DEBUR WELD AREA	509. EVACUATE & RECHARGE AC *SEPARATE FROM FRONT A/C*	
512. REAR SILL AT WELD AREA, REPAIR 513. FILL & FEATHER WELDS 514. INNER PANEL DISTORTION DUE TO ADHESIVE, REPAIR 515. WHEEL OPEN INNER STRUCTURE, REPAIR 516. CLEAN FILE AND DEBUR WELD AREA	510. R&I REAR HEATER/AC COMPONENTS	
513. FILL & FEATHER WELDS 514. INNER PANEL DISTORTION DUE TO ADHESIVE, REPAIR 515. WHEEL OPEN INNER STRUCTURE, REPAIR 516. CLEAN FILE AND DEBUR WELD AREA		
514. INNER PANEL DISTORTION DUE TO ADHESIVE, REPAIR 515. WHEEL OPEN INNER STRUCTURE, REPAIR 516. CLEAN FILE AND DEBUR WELD AREA	512. REAR SILL AT WELD AREA, REPAIR	
515. WHEEL OPEN INNER STRUCTURE, REPAIR 516. CLEAN FILE AND DEBUR WELD AREA	513. FILL & FEATHER WELDS	
516. CLEAN FILE AND DEBUR WELD AREA	514. INNER PANEL DISTORTION DUE TO ADHESIVE, REPAIR	
	515. WHEEL OPEN INNER STRUCTURE, REPAIR	
517. FILL & FEATHER CONTOUR REPAIR AREAS	516. CLEAN FILE AND DEBUR WELD AREA	
	517. FILL & FEATHER CONTOUR REPAIR AREAS	



518. COBALT DRILL BIT (BORON-TRIP-UZI BOR)	
519. STONE GUARD DECAL	
520. COLATERAL DAMAGE FROM THE REPAIR PROCESS (BUILD SEQUENCE)	
521. MASK WRAP WIRE HARNESS	
522. MASK/BAG INTERIOR FOR PROTECTION	
523. MASK JAMBS & OPENINGS	
524. MASK FOR PRIMER APPLICATION	
525. SPOT PAINT FLOOR AT WELDS	
526. SPOT PAINT BACK SIDE OF ROCKER	
527. SPOT PAINT REAL SILL	
528. ROOF DRIP WELDS, DRESS	
529. REFINISH ROOF	
530. REFINSH TWO TONE BLACK OUT	
531. PREP CLADDING FOR "RAW" PROCESSING	
532. GRAVEL GUARD	
533. PULL BACK/ROPE-MASK SIDE PANEL GLASS MOLDING	
90 - DECK LID:	
534. ACCESS PULLING & CUTTING, ACCESS TO COMPONENTS	
535. R&I LICENSE PLATE	
536. REPAIR LICENSE PLATE	
537. DRILL FOR LICENSE PLATE BRACKET	
538. REPAIR DECK LID HINGES	
539. REPAIR HINGE MOUNT AREA	
540. TRIAL FIT AND POSITION	
541. R&I AUTO LOCK	
542. REFINISH TWO TONE BLACK OUT	
543. RE-CODE DECK LID CYLINDER	
544. SEAM SEAL INNER EDGE	
545. CAVITY WAX	
546. MINI BULBS	
547. WIRE HARNESS REPAIR	
548. DRILL TEMPLATE FOR SPOILER	
549. LOCK LINKAGE REPAIR	
550. PREP DECK LID CLADDING FOR "RAW" PROCESSING	
95 - REAR BODY PANEL:	
551. PRE-PULL REAR BODY PANEL	
552. REMOVE CAULKING AND SEAM SEALER 553. REPLACE CAULKING AND SEAM SEALER	
554. UNDERCOATING REAR BODY PANEL	
555. CAVITY WAX	
556. COBALT DRILL BIT (BORON-TRIP-UZI BOR)	
557. SELF LEAVELING SEAM SEALER	
558. WELD-THRU PRIMER	
559. SOUND DEADENER, SPRAYABLE SEALER	
560. R&I LICENSE PLATE	
561. REPAIR LICENSE PLATE	
562. DRILL FOR LICENSE PLATE BRACKET	
563. MOVE TO PROTECT OR R&I EXHAUST	
564. R&I SPARE TIRE AND TOOLS	
565. TEST FITS PARTS ATTACHED/ADJACENT TO BODY PANEL	



566. FEATHER & FILL CONTOUR REPAIR AREA		
567. BRAZING, COPPER SILIUM MIG BRAZING		
568. FEATHER & FILL WELDS		
569. REPAIR INNER SIDE OF BODY PANEL AT WELD AREAS		
570. REPAIR LEFT QUARTER PANEL REPAIR AT WELD AREA		
571. REPAIR RIGHT QUARTER PANEL REPAIR AT WELD AREA		
572. REPAIR FLOOR WELD DAMAGE		
573. REPAIR FLOOR		
574. COLATERAL DAMAGE FROM THE REPAIR PROCESS (BUILD SEQUENCE)		
575. WIRE HARNESS, REPAIR		
576. CLEAN FILE AND DEBUR WELD AREA		
577. WIRE HARNESS FASTENERS, REPLACE		
578. RE-CODE LOCK CYLINDER		
579. PULL BACK WIRE HARNESS		
580. WRAP/MASK WIRE HARNESS		
581. MASK BAG INTERIOR FOR REFINISH		
582. MASK JAMS AND EDGES OF BODY PANEL		
583. SPOT PAINT INNER SIDE OF ADJACENT PANELS AT WELD AREAS		
584. REFINISH BACK SIDE OF BODY PANEL (SECOND COLOR?)		
585. SPOT PAINT TOP SIDE OF FLOOR PANEL		
586. SPOT PAINT UNDERSIDE OF FLOOR PANEL		
587. SPOT PAINT INNER SIDES OF QUARTER PANELS AT WELD AREA		
588. REFINISH TWO TONE BLACK OUT		
100 - FLOOR:		
589. PRE-PULL FLOOR PANEL		
590. REMOVE CAULKING AND SEAM SEALER		
591. REPLACE CAULKING AND SEAM SEALER **PER TUBE***	<u> </u>	
592. UNDERCOAT	<u> </u>	
593. CAVITY WAX 594. WELD-THRU PRIMER	<u> </u>	
	<u> </u>	
595. COBALT DRILL BIT (BORON-TRIP-UZI BOR)	<u> </u>	
596. SOUND DEADENER, SPRAYABLE SEALER (TWO TUBES)		
597. COLATERAL DAMAGE FROM THE REPAIR PROCESS (BUILD SEQUENCE)		
598. R&I EXHAUST		
599. R&I SPARE TIRE AND TOOLS		
600. TEST FIT PARTS ATTACHED/ADJACENT TO FLOOR PANEL		
601. R&I ELECTRONIC COMPONENTS AT FLOOR AREA (CD, AMP, SRS)		
602. R&I EMMISIONS COMPONENTS AT FLOOR AREA		
603. R&I TRUNK INTERIOR ***INDIVIDUAL COMPONENTS***		
604. PULL BACK WIRE HARNESS		
605. EXPANSION FOAM		
606. FEATHER & FILL AREAS ATTACHED BY WELDING		
607. R&I BOLTED SUSPENTION *ALL COMPONENTS******		
608. CROSSMEMBER AT WELD AREA, REPAIR/DRESS		
609. SIDE FLOOR EXTENSIONS, REPAIR		
610. FRAME RAIL FLANGE REPAIR AT WELD AREA		
611. WHEEL HOUSE(S) REPAIR AT WELD AREA		
612. CLEAN FILE AND DEBUR WELD AREA		
613. PULL BACK MASK LINES AND CABLES AT FLOOR AREA		
614. R&I FUEL TANK		
615. DRAIN FUEL FROM TANK		



616. WRAP MASK WIRE HARNESS	
617. MASK & PROTECT INTERIOR	
618. REFINISH TOP SIDE OF FLOOR	
619. REFINISH UNDERSIDE OF FLOOR	
620. SPOT PAINT UNDERSIDE ADJACENT PANELS AT WELD AREA	
621. CENTER FLOOR AT WELD AREA, REPAIR/DRESS	
622. SPOT PAINT CENTER FLOOR AREA	
623. SPOT PAINT CROSSMEMBER	
624. SPOT PAINT FLOOR EXTENSIONS	
625. SPOT PAINT RAILS AT WELD AREA, UNDERSIDE	
626. SPOT PAINT WHEEL HOUSE AT WELD AREA	
627. FLOOR TWO TONE AND/OR BLACK-OUT	
105 - PROTECTION & SAFETY:	
628. D&R HYBRID BATTERY	
629. HYBRID BATTERY PROTECTIVE STORAGE	
630. D&R BATTERY	
631. RESET ELECTRONIC MEMORY, RADIO	
632. RESET ELECTRONIC MEMORY, SEAT/STEERING WHEEL	
633. DIAGNOSE SRS DISPLAY	
634. DISABLE/ENABLE SRS	
635. DIAGNOSE ALARM CODES	
636. MASK ELECTRONIC CONNECTIONS	
637. R&I FUEL TANK	
638. DRAIN FUEL FROM TANK	
110 - PAINT PREP:	
110 - PAINT PREP: 639. REMOVE OIL , TAR & GREASE	
639. REMOVE OIL , TAR & GREASE	
639. REMOVE OIL , TAR & GREASE 640. REMOVE CORROSION PROTECTION MATERIAL	
639. REMOVE OIL , TAR & GREASE 640. REMOVE CORROSION PROTECTION MATERIAL 641. RESTORE CORROSION PROTECTION	
639. REMOVE OIL , TAR & GREASE 640. REMOVE CORROSION PROTECTION MATERIAL 641. RESTORE CORROSION PROTECTION 642. REMOVE MOLDING ADHESIVE 115 - REFINISH PROCESS:	
639. REMOVE OIL , TAR & GREASE 640. REMOVE CORROSION PROTECTION MATERIAL 641. RESTORE CORROSION PROTECTION 642. REMOVE MOLDING ADHESIVE	
639. REMOVE OIL , TAR & GREASE 640. REMOVE CORROSION PROTECTION MATERIAL 641. RESTORE CORROSION PROTECTION 642. REMOVE MOLDING ADHESIVE 115 - REFINISH PROCESS: 643. DIFFICULT COLOR, TINTING & TESTING (INACCURATE VARIANCE) 644. MASK FOR PRIMING	
639. REMOVE OIL , TAR & GREASE 640. REMOVE CORROSION PROTECTION MATERIAL 641. RESTORE CORROSION PROTECTION 642. REMOVE MOLDING ADHESIVE 115 - REFINISH PROCESS: 643. DIFFICULT COLOR, TINTING & TESTING (INACCURATE VARIANCE) 644. MASK FOR PRIMING 645. SPOT PAINT CORESUPPORT AFTER INSTALLED (SECOND PAINT)	
639. REMOVE OIL , TAR & GREASE 640. REMOVE CORROSION PROTECTION MATERIAL 641. RESTORE CORROSION PROTECTION 642. REMOVE MOLDING ADHESIVE 115 - REFINISH PROCESS: 643. DIFFICULT COLOR, TINTING & TESTING (INACCURATE VARIANCE) 644. MASK FOR PRIMING 645. SPOT PAINT CORESUPPORT AFTER INSTALLED (SECOND PAINT) 646. SPRAY OUT TEST PANEL	
639. REMOVE OIL , TAR & GREASE 640. REMOVE CORROSION PROTECTION MATERIAL 641. RESTORE CORROSION PROTECTION 642. REMOVE MOLDING ADHESIVE 115 - REFINISH PROCESS: 643. DIFFICULT COLOR, TINTING & TESTING (INACCURATE VARIANCE) 644. MASK FOR PRIMING 645. SPOT PAINT CORESUPPORT AFTER INSTALLED (SECOND PAINT) 646. SPRAY OUT TEST PANEL 647. SPRAY OUT LET-DOWN PANEL FOR THREE STAGE	
639. REMOVE OIL , TAR & GREASE 640. REMOVE CORROSION PROTECTION MATERIAL 641. RESTORE CORROSION PROTECTION 642. REMOVE MOLDING ADHESIVE 115 - REFINISH PROCESS: 643. DIFFICULT COLOR, TINTING & TESTING (INACCURATE VARIANCE) 644. MASK FOR PRIMING 645. SPOT PAINT CORESUPPORT AFTER INSTALLED (SECOND PAINT) 646. SPRAY OUT TEST PANEL 647. SPRAY OUT LET-DOWN PANEL FOR THREE STAGE 648. SPRAY OUT LET-DOWN PANEL FOR TRANSPARENT COLOR	
639. REMOVE OIL , TAR & GREASE 640. REMOVE CORROSION PROTECTION MATERIAL 641. RESTORE CORROSION PROTECTION 642. REMOVE MOLDING ADHESIVE 115 - REFINISH PROCESS: 643. DIFFICULT COLOR, TINTING & TESTING (INACCURATE VARIANCE) 644. MASK FOR PRIMING 645. SPOT PAINT CORESUPPORT AFTER INSTALLED (SECOND PAINT) 646. SPRAY OUT TEST PANEL 647. SPRAY OUT LET-DOWN PANEL FOR THREE STAGE 648. SPRAY OUT LET-DOWN PANEL FOR TRANSPARENT COLOR 649. COLOR TINT & TEST TO BLENDABLE MATCH	
639. REMOVE OIL , TAR & GREASE 640. REMOVE CORROSION PROTECTION MATERIAL 641. RESTORE CORROSION PROTECTION 642. REMOVE MOLDING ADHESIVE 115 - REFINISH PROCESS: 643. DIFFICULT COLOR, TINTING & TESTING (INACCURATE VARIANCE) 644. MASK FOR PRIMING 645. SPOT PAINT CORESUPPORT AFTER INSTALLED (SECOND PAINT) 646. SPRAY OUT TEST PANEL 647. SPRAY OUT LET-DOWN PANEL FOR THREE STAGE 648. SPRAY OUT LET-DOWN PANEL FOR TRANSPARENT COLOR 649. COLOR TINT & TEST TO BLENDABLE MATCH 650. COLOR TINT SECOND COLOR	
639. REMOVE OIL , TAR & GREASE 640. REMOVE CORROSION PROTECTION MATERIAL 641. RESTORE CORROSION PROTECTION 642. REMOVE MOLDING ADHESIVE 115 - REFINISH PROCESS: 643. DIFFICULT COLOR, TINTING & TESTING (INACCURATE VARIANCE) 644. MASK FOR PRIMING 645. SPOT PAINT CORESUPPORT AFTER INSTALLED (SECOND PAINT) 646. SPRAY OUT TEST PANEL 647. SPRAY OUT LET-DOWN PANEL FOR THREE STAGE 648. SPRAY OUT LET-DOWN PANEL FOR TRANSPARENT COLOR 649. COLOR TINT & TEST TO BLENDABLE MATCH 650. COLOR TINT SECOND COLOR 651. GRAVEL GUARD FIRST PANEL	
639. REMOVE OIL , TAR & GREASE 640. REMOVE CORROSION PROTECTION MATERIAL 641. RESTORE CORROSION PROTECTION 642. REMOVE MOLDING ADHESIVE 115 - REFINISH PROCESS: 643. DIFFICULT COLOR, TINTING & TESTING (INACCURATE VARIANCE) 644. MASK FOR PRIMING 645. SPOT PAINT CORESUPPORT AFTER INSTALLED (SECOND PAINT) 646. SPRAY OUT TEST PANEL 647. SPRAY OUT LET-DOWN PANEL FOR THREE STAGE 648. SPRAY OUT LET-DOWN PANEL FOR TRANSPARENT COLOR 649. COLOR TINT & TEST TO BLENDABLE MATCH 650. COLOR TINT SECOND COLOR 651. GRAVEL GUARD FIRST PANEL	
639. REMOVE OIL , TAR & GREASE 640. REMOVE CORROSION PROTECTION MATERIAL 641. RESTORE CORROSION PROTECTION 642. REMOVE MOLDING ADHESIVE 115 - REFINISH PROCESS: 643. DIFFICULT COLOR, TINTING & TESTING (INACCURATE VARIANCE) 644. MASK FOR PRIMING 645. SPOT PAINT CORESUPPORT AFTER INSTALLED (SECOND PAINT) 646. SPRAY OUT TEST PANEL 647. SPRAY OUT LET-DOWN PANEL FOR THREE STAGE 648. SPRAY OUT LET-DOWN PANEL FOR TRANSPARENT COLOR 649. COLOR TINT & TEST TO BLENDABLE MATCH 650. COLOR TINT SECOND COLOR 651. GRAVEL GUARD FIRST PANEL 652. GRAVEL GUARD SECOND PANEL	
639. REMOVE OIL , TAR & GREASE 640. REMOVE CORROSION PROTECTION MATERIAL 641. RESTORE CORROSION PROTECTION 642. REMOVE MOLDING ADHESIVE 115 - REFINISH PROCESS: 643. DIFFICULT COLOR, TINTING & TESTING (INACCURATE VARIANCE) 644. MASK FOR PRIMING 645. SPOT PAINT CORESUPPORT AFTER INSTALLED (SECOND PAINT) 646. SPRAY OUT TEST PANEL 647. SPRAY OUT LET-DOWN PANEL FOR THREE STAGE 648. SPRAY OUT LET-DOWN PANEL FOR TRANSPARENT COLOR 649. COLOR TINT & TEST TO BLENDABLE MATCH 650. COLOR TINT SECOND COLOR 651. GRAVEL GUARD FIRST PANEL 652. GRAVEL GUARD SECOND PANEL 653. GRAVEL GUARD SPRAY-OUT TEST PANEL	
639. REMOVE OIL , TAR & GREASE 640. REMOVE CORROSION PROTECTION MATERIAL 641. RESTORE CORROSION PROTECTION 642. REMOVE MOLDING ADHESIVE 115 - REFINISH PROCESS: 643. DIFFICULT COLOR, TINTING & TESTING (INACCURATE VARIANCE) 644. MASK FOR PRIMING 645. SPOT PAINT CORESUPPORT AFTER INSTALLED (SECOND PAINT) 646. SPRAY OUT TEST PANEL 647. SPRAY OUT LET-DOWN PANEL FOR THREE STAGE 648. SPRAY OUT LET-DOWN PANEL FOR TRANSPARENT COLOR 649. COLOR TINT & TEST TO BLENDABLE MATCH 650. COLOR TINT SECOND COLOR 651. GRAVEL GUARD FIRST PANEL 652. GRAVEL GUARD SECOND PANEL 653. GRAVEL GUARD SPRAY-OUT TEST PANEL 654. GRAVEL GUARD SPRAY-OUT TEST PANEL	
639. REMOVE OIL , TAR & GREASE 640. REMOVE CORROSION PROTECTION MATERIAL 641. RESTORE CORROSION PROTECTION 642. REMOVE MOLDING ADHESIVE 115 - REFINISH PROCESS: 643. DIFFICULT COLOR, TINTING & TESTING (INACCURATE VARIANCE) 644. MASK FOR PRIMING 645. SPOT PAINT CORESUPPORT AFTER INSTALLED (SECOND PAINT) 646. SPRAY OUT TEST PANEL 647. SPRAY OUT LET-DOWN PANEL FOR THREE STAGE 648. SPRAY OUT LET-DOWN PANEL FOR TRANSPARENT COLOR 649. COLOR TINT & TEST TO BLENDABLE MATCH 650. COLOR TINT SECOND COLOR 651. GRAVEL GUARD FIRST PANEL 652. GRAVEL GUARD SECOND PANEL 653. GRAVEL GUARD SPRAY-OUT TEST PANEL 654. GRAVEL GUARD SPRAY-OUT TEST PANEL 655. HAZARDOUS WASTE DISPOSAL 656. UNDERSIDE COLOR TINTING & TESTING (CORESUPPORT & TRUNK AREAS)	
639. REMOVE OIL , TAR & GREASE 640. REMOVE CORROSION PROTECTION MATERIAL 641. RESTORE CORROSION PROTECTION 642. REMOVE MOLDING ADHESIVE 115 - REFINISH PROCESS: 643. DIFFICULT COLOR, TINTING & TESTING (INACCURATE VARIANCE) 644. MASK FOR PRIMING 645. SPOT PAINT CORESUPPORT AFTER INSTALLED (SECOND PAINT) 646. SPRAY OUT TEST PANEL 647. SPRAY OUT LET-DOWN PANEL FOR THREE STAGE 648. SPRAY OUT LET-DOWN PANEL FOR TRANSPARENT COLOR 649. COLOR TINT & TEST TO BLENDABLE MATCH 650. COLOR TINT SECOND COLOR 651. GRAVEL GUARD FIRST PANEL 652. GRAVEL GUARD SECOND PANEL 653. GRAVEL GUARD SPRAY-OUT TEST PANEL 654. GRAVEL GUARD SPRAY-OUT TEST PANEL 655. HAZARDOUS WASTE DISPOSAL 656. UNDERSIDE COLOR TINTING & TESTING (CORESUPPORT & TRUNK AREAS) 657. UNDERSIDE COLOR REFINISH	
639. REMOVE OIL , TAR & GREASE 640. REMOVE CORROSION PROTECTION MATERIAL 641. RESTORE CORROSION PROTECTION 642. REMOVE MOLDING ADHESIVE 115 - REFINISH PROCESS: 643. DIFFICULT COLOR, TINTING & TESTING (INACCURATE VARIANCE) 644. MASK FOR PRIMING 645. SPOT PAINT CORESUPPORT AFTER INSTALLED (SECOND PAINT) 646. SPRAY OUT TEST PANEL 647. SPRAY OUT LET-DOWN PANEL FOR THREE STAGE 648. SPRAY OUT LET-DOWN PANEL FOR TRANSPARENT COLOR 649. COLOR TINT & TEST TO BLENDABLE MATCH 650. COLOR TINT SECOND COLOR 651. GRAVEL GUARD FIRST PANEL 652. GRAVEL GUARD SECOND PANEL 653. GRAVEL GUARD SHAY-OUT TEST PANEL 654. GRAVEL GUARD SPRAY-OUT TEST PANEL 655. HAZARDOUS WASTE DISPOSAL 656. UNDERSIDE COLOR TINTING & TESTING (CORESUPPORT & TRUNK AREAS) 657. UNDERSIDE COLOR REFINISHING ONE TIME)	
639. REMOVE OIL , TAR & GREASE 640. REMOVE CORROSION PROTECTION MATERIAL 641. RESTORE CORROSION PROTECTION 642. REMOVE MOLDING ADHESIVE 115 - REFINISH PROCESS: 643. DIFFICULT COLOR, TINTING & TESTING (INACCURATE VARIANCE) 644. MASK FOR PRIMING 645. SPOT PAINT CORESUPPORT AFTER INSTALLED (SECOND PAINT) 646. SPRAY OUT TEST PANEL 647. SPRAY OUT LET-DOWN PANEL FOR THREE STAGE 648. SPRAY OUT LET-DOWN PANEL FOR TRANSPARENT COLOR 649. COLOR TINT & TEST TO BLENDABLE MATCH 650. COLOR TINT SECOND COLOR 651. GRAVEL GUARD FIRST PANEL 652. GRAVEL GUARD THIRD PANEL 654. GRAVEL GUARD SPRAY-OUT TEST PANEL 655. HAZARDOUS WASTE DISPOSAL 656. UNDERSIDE COLOR TINTING & TESTING (CORESUPPORT & TRUNK AREAS) 657. UNDERSIDE COLOR REFINISH	



120 COLOD CAND & DOLICIL	
120 - COLOR-SAND & POLISH:	
661. COLOR SAND & POLISH, 1 ST PANEL (MATERIALS AND LABOR)	
662. COLOR SAND & POLISH, 2 ND PANEL (MATERIALS AND LABOR)	
663. COLOR SAND & POLISH, 3 RD PANEL (MATERIALS AND LABOR)	
664. COLOR SAND & POLISH, 4 TH PANEL (MATERIALS AND LABOR)	
665. COLOR SAND & POLISH, 5 TH PANEL (MATERIALS AND LABOR)	
666. COLOR SAND & POLISH, 6 TH PANEL (MATERIALS AND LABOR)	
667. COLOR SAND & POLISH, 7 TH PANEL (MATERIALS AND LABOR)	
668. COLOR SAND & POLISH, 8 TH PANEL <i>(MATERIALS AND LABOR)</i>	
669. FINAL WASH TO REMOVE COMPOUND RESIDUE	
670. POLISH RIM SKUFF	
671. SPOT REFINISH RIM	
125 - STRIPES:	
672. REMOVE OLD STRIPES WITH ERASER WHEEL USE	
673. RESTRIPE WITH FINE-LINE TAPE	
674. RESTRIPE PAINTED-ON	
675. FACTORY STRIPE INSTALLATION	
130 - GLASS:	
676. CAUTIONARY STEPS TO PREVENT DAMAGE	
677. REPAIR FLANGE DAMAGE FROM CUT KNIFE	
678. TEST FIT GLASS	
679. REMOVE URETHANE RESEDUE AT PINCHWELD, FULL CUT OUT	
680. BROKEN GLASS CLEAN-UP (SEATS & CARPET)	
681. BROKEN GLASS CLEAN-UP (VENTS) **R&I DASH NEEDED????***	
682. URETHANE ADHESIVE REMOVAL	
683. URETHANE GLASS KIT	
135 - FRAME SET UP:	
684. UNIBODY CLAMP SYSTEM	
685. FULL FRAME CLAMP SYSTEM	
686. NON-DRIVE VEHICLE (NO START)	
687. DISABLE VEHICLE (DOES NOT ROLL)	
688. LIFTED/LOWERED VEHICLE	
689. TRAM VEHICLE TO DETERMINE IF MOVEMENT EXISTS	
690. INSTALL MECHANICAL MEASURING SYSTEM	
691. ELECTRONIC MEASUREMENT DOCUMENT	
692. R&I ROCKER MLDGS- ACCESS TO CLAMP AREA	
693. ACCESS PULLING TO FACILITATE TEAR DOWN	
694. R&I INTERFERING WIRES, TUBING/LINES, EXHAUST	
695. R&I SUSPENSION/STEERING, PARTIAL	
696. REPAIR CLAMP SCARING ON ROCKER FLANGE	
697. REPAIR ANCHOR DAMAGE AT LOCKING POINTS	
698. REPAIR PROTECTIVE COATING AT ROCKER	
699. PAINT ROCKER FLANGE	
140 – FRAME REPLACEMENT	
700. MEASURE USED FRAME	
701. CLEAN USED FRAME	
702. DISPOSE OF VIN / REGISTER NEW FRAME VIN	
703. CUT UP DAMAGED FROM FOR DISPOSAL	
704. CUT UP AND DISPOSE OF CRATE	



705. BLEED BRAKES		
706. DRAIN BRAKE FLUID		
707. DRAIN RADIATOR		
708. BLEED RADIATOR SYSTEM		
709. RADIATOR COOLANT		
710. R&I TRANS COOLER		
711. TRANSMISSION FLUID		
712. R&I HEATER HOSES		
713. SET OR ADJUST PARKING BRAKE		
714. EVACUATE AND RECHARGE A/C SYSTEM		
715. A/C OIL AND FREON		
716. A/C "O" RINGS		
717. REMOVE PRESSURE FROM AB AND RECHARGE ABS SYSTEM		
718. DIAGNOSE ABS (SCAN TOOL)		
719. R&I HEAT SHIELDS		
720. R&I SPARE TIRE CARRIER		
721. R&I BED SHELL (IF EQUIPPED)		
721. R&I BED SHEEL (IF EQUIPPED)		
722. R&I BED LINER (IF EQUIPPED) 723. 4 WHEEL ALIGNMENT		
724. REMOVE & STORE FUEL FROM GAS TANK		
725. R&I FUEL NECK ASSEMBLY		
726. R&I WHEELS		
727. R&I BOTTOM ENGINE SHIELDS AND SKID PLATES		
728. R&I ABS SENSORS		
729. R&I ABS WIRE LOOM		
730. R&I TRAILER HITCH AND WIRES		
731. R&I EXHAUST SYSTEM AS ASSEMBLY		
732. R&I EXHAUST SYSTEM AS COMPONENTS		
733. R&I 4 WHEEL DRIVE SHAFT		
734. R&I REAR DRIVE SHAFT ON 4 WHEEL DRIVE AS COMPONENTS		
735. R&I RIDE HEIGHT SENSORS		
736. CALIBRATE RIDE HEIGHT		
737. R&I RIDE HEIGHT WIRE LOOM		
738. O/H SUSPENSION PARTS THAT ARE DAMAGED		
739. R&I PARTS THAT CANNOT BE REMOVED AS ASSEMBLY		
740. R&I CARPETS FOR ACCESS		
741. FREIGHT FOR FRAME		
742. D&R BATTERY		
743. RESET RADIO CODES		
744. R7I FAN		
745. R&I FAN SHROUD		
746. R&I MOUNTING CLIPS AND BRACKETS		
747. REPLACE BROKEN CLIPS		
748. R&I FENDER SHIELDS OR LINERS		
749. R&I (M) COMPONENTS ATTACHED TO FRAME		
750. D&R BRAKE LINE TO BRAKE BOOSTER		
751. DRAIN POWER STEERING FLUID		
752. REPLACE POWER STEERING FLUID		
753. REPLACE WASHER FLUIDS		
754. ROAD TEST		
755. PRE-SCAN VEHICLE		
7557772 55747 12111522	I .	



Labor Category Legend – By Color:

Body

Body

Structural

Mechanical

Detail

Other

	1	
756. POST-REPAIR SCAN		
757. RESET ALL TROUBLE CODES		
758. DISABLE AND ENABLE SRS SYSTEM		
759. R&I CENTER CONSOLE TO DISCONNECT SHIFTER		
760. DISCONNECT STEERING SHAFT		
761. R&I ELECTRICAL SUSPENISION COMPONENTS		
762. TOW TO DEALER TO RESET CODES		
763. SET BODY ON ROLLING BENCH (OR FRAME BENCH)		
764. RESET ELECTRICAL COMPONENTS		
765. REPLACE PAG OIL FOR RIDE HEIGHT COMPRESSOR		
766. RIDE HEIGHT COMPRESSOR TANK		
767. HAZ WASTE DISPOSAL		
768. ADDITIONAL WORK SPACE (2 ND STALL)		
769. R&I OIL COOLER		
770. R&I HYDRAULIC/ELECTRIC ANIT-SWAY BAR		
771. BLEED AND DRAIN HYDROLIC SWAY BAR		
772. CHECK FLUIDS (ENGINE, TRANS, TRANSFER CASE, FRONT AND/OR REAR DIFF.)		
773. R&I RUNNING BOARDS		
774. R&I WINCH		
775. R&I BRUSH BAR		
776. R&I EMISSIONS COMPONENTS		
777. INITIALIZATION OF WINDOWS, SUN ROOF, DOOR LOCKS, ETC.		
778. RESET STEERING ANGLE SENSOR		
779. R&I HEADLAMPS FOR ACCESS		
780. AIM HEADLAMPS		
781. R&I GRILLE		
782. R&I CORE SUPPORT FOR ACCESS (BOLT ON TYPE)		
783. R&I RADIATOR		
784. R&I A/C CONDENSOR		
785. R&I POWER STEERING COOLER		
786. CAP OFF A/C LINES		
787. CAP OF EVAPORATOR		
788. STRAIGHTEN / PULL DAMAGED FRAME FOR REMOVAL ACCESS		
789. REPLACE DAMAGED MOUNTING HARDWARE		
790. REPAIR MOUNTING LOCATIONS ON CAB / BED		
791. R&I FUEL LINES ATTACHED TO FRAME		
792. CORROSION PROTECTION (AS PER OEM GUIDELINES)		
793. R&I BRAKE CALIPERS		
794. R&I SPEED SENSORS		
795. CALIBRATE ABS SYSTEM		
796. R&I AUX FUEL TANK		
797. D&R DRIVE SHAFTS FROM FRONT SUSPENSION (FRONT WHEEL DRIVE VEH)		
798. R&I ABS LINES		
145 - FRONT END DAMAGE:		
799. PRE-PULL TO FACILITATE TEAR DOWN		
800. PULL & REPOSITION CORESUPPORT		
801. REPAIR FRONT BUMPER WELDED MOUNTING BRACKET (EACH)		
802. CORRECT UPPER RAIL/APRON SWAY, LEFT		
803. CORRECT UPPER RAIL/APRON SWAY, RIGHT		
804. CORRECT UPPER RAIL/APRON HEIGHT, LEFT		
805. CORRECT UPPER RAIL/APRON HEIGHT, RIGHT		
I The state of the		1



OO/ CODDECT LIDDED DAIL ADDONLENCTH/MACH LEFT	 1
806. CORRECT UPPER RAIL APRON LENGTH/MASH, LEFT	
807. CORRECT UPPER RAIL APRON LENGTH/MASH, RIGHT	
808. REPAIR AND CORRECT DIAMOND CONDITION	
809. MEASURE SUSPENSION X-1 CAR-O-LINER	
810. POSITION AND ALIGN FRONT CROSSMEMBER	
811. POSITION AND ALIGN CENTER CROSSMEMBER	
812. POSITION AND ALIGN REAR CROSSMEMBER	
813. R&I COMPONENTS MOUNTED TO APRON-S	
814. LOOSEN BRACKETS FOR PULL AND REPAIR	
815. REPAIR LEFT LEAF SPRING BRACKET/SHACKLE	
816. REPAIR RIGHT LEAF SPRING BRACKET/SHACKLE	
817. PULL LEFT RAIL, SWAY	
818. PULL RIGHTRAIL, SWAY	
819. PULL LEFT RAIL LENGTH	
820. PULL RIGHT RAIL LENGTH	
821. REPAIR LEFT RAIL MASH <i>(CUT OUT MASH TO REPAIR)</i>	
822. REPAIR RIGHT RAIL MASH (CUT OUT MASH TO REPAIR)	
823. PULL LEFT RAIL HEIGHT	
824. PULL RIGHT RAIL HEIGHT	
825. CORRECT LEFT RAIL TWIST	
826. CORRECT RIGHT RAIL TWIST	
827. PULL ENGINE/SUSPENSION CROSSMEMBER	
828. PULL & POSITION APRON, LEFT	
829. PULL & POSITION APRON, RIGHT	
830. PULL & POSITION STRUT TOWER, LEFT	
831. PULL & POSITION STRUT TOWER, RIGHT	
832. VECTOR INWARD RAIL TWIST **(EACH RAIL) **	
833. R&I ENGINE (FOR ACCESS)	
834. R&I TRANSMISSION (FOR ACCESS)	
, ,	
150 - SIDE DAMAGE:	
835. ACCESS PULLING TO FACILITATE TEAR DOWN	
836. PULL & POSITION COWL FOR REPAIR	
837. PULL & POSITION DASH REINFORCEMENT BAR	
838. PULL & POSITION PILLAR, OUTBOARD (EACH OF A,B & C PILLARS)	
839. PULL & POSITION PILLAR, REARWARD (EACH OF A,B & C PILLARS)	
840. PULL & POSITION PILLAR, FORWARD (EACH OF A,B & C PILLARS)	
841. PULL & POSITION PILLAR, TWIST <i>(EACH OF A,B & C PILLARS</i>)	
842. SQUARE DOOR OPENING (TRIAL FIT DOOR AS NEEDED)	
843. PULL & POSITION ROCKER	
844. PULL & POSITION CENTER FLOOR	
845. LOOSEN FULL FRAME BRACKETS	
846. CORRECT PILLAR INNER REINFORCEMENT (EACH OF A,B & C PILLARS)	
847. CORRECT PILLAR INNER PANEL (EACH OF A,B & C PILLARS)	
848. CORRECT ROCKER INNER REINFORCEMENT	
849. CORRECT ROCKER INNER PANEL	
850. PULL QUARTER PANEL POST	
851. PULL/CORRECT PACKAGE TRAY AREA	
	 1



155 - REAR END DAMAGE:		
852. ACCESS PULLING TO FACILITATE TEAR DOWN		
853. REPAIR REAR FRAME RAIL WELDED BRACKET (EACH SIDE)		
854. REPAIR REAR LEAF SPRING BRACKET/SHACKLE (EACH SIDE)		
855. PULL & POSITION REAR BODY PANEL		
856. PULL REAR FLOOR PAN, LENGTH		
857. PULL REAR FLOOR PAN, LEVEL		
858. PULL LEFT RAIL, LENGTH		
859. PULL RIGHT RAIL, LENGTH		
860. PULL LEFT RAIL, SWAY		
861. PULL RIGHT RAIL, SWAY		
862. PULL LEFT RAIL, HEIGHT		
863. PULL RIGHT RAIL, HEIGHT		
864. PULL LEFT RAIL, TWIST		
865. PULL RIGHT RAIL, TWIST		
866. PULL & POSITION REAR CROSSMEMBER		
867. PULL & POSITION LEFT QUARTER (FOR REPAIR)		
868. PULL & POSITION RIGHT QUARTER (FOR REPAIR)		
869. PULL & POSITION LEFT INNER QUARTER STRUCTURE		
870. PULL & POSITION RIGHT INNER QUARTER STRUCTURE		
871. PULL & POSITION SUSPENSION MOUTING POINTS		
872. CORRECT DIAMOND CONDITION		
873. CORRECT RAIL PERCH AT SPRING MOUNT AREA		
874. REMOVE TWIST IN CENTER SECTION OF FULL FRAME		
875. CORRECT BODY/CAB MOUNTS		
876. CORRECT BODY TO FRAME ISOLATOR MOUNTS		
877. MEASURE SUSPENSION CONTROL POINTS		
878. CORRECT BED MOUNTS		
879. PULL & POSITION BED X-MEMBER		
880. PULL & POSITION BED FLOOR		
881. PULL & POSITION BED SIDE PANEL, OUTER (FOR REPAIR)		
882. PULL & POSITION BED INNER PANEL		
883. PULL & POSITION BED FRONT PANEL		
884. CORRECT TAIL GATE OPENING, SQUARE		
885. CORRECT RAIL MASH		
886. CORRECT BUMPER BRACKET MOUNT AREA		
887. VECTOR REPAIR INWARD RAIL TWIST (EACH RAIL)		
160 - FLOOR ANCHOR PULLING SYSTEM:		
888. FLOOR ANCHOR CLAMP SYSTEM SET UP		
889. FLOOR PULL CORESUPPORT		
890. FLOOR PULL APRON		
891. FLOOR PULL UPPER RAIL		
892. FLOOR PULL QUARTER LOCK POST/DOG LEG		
893. FLOOR PULL QUARTER WHEEL HOUSE		
894. FLOOR PULL BACK PANEL		
895. FLOOR PULL BUMPER MOUNT AREA		
	•	



165 - THEFT/VANDALISM:	
896. DETAIL/CLEANUP	
897. MECHANICAL CHECK	
898. ROAD TEST	
899. CHECK FLUIDS AND LAMPS	
900. TOP OFF FLUIDS	
901. COPY KEY FROM CYLINDER	
902. CODE IGNITION CYLINGER	
903. CODE DOOR CYLINDER	
170 - DETAIL/CLEAN-UP:	
904. DETAIL	
905. PAINT SEALANT (COMPLETE) LIFETIME WARANTY	
906. PAINT SEALANT (COMPLETE) LIFETHME WARANTT	
900. PAINT SEALANT (PER PAINEL) 907. CLEAN INTERIOR FROM SPILLS CAUSED BY LOSS	
907. CLEAN INTERIOR FROM SPILLS CAUSED BY LOSS 908. CLEAN & DETAIL , POLISH AND SWIRL MARK REMOVAL	
909. CLEAN FOR DELIVERY	
910. CLEAN UP DEPLOYED AIR BAG RESIDUE	
175 - TOW, STORAGE & ADMINISTRATION:	
911. TEAR DOWN CHARGE	
911. TEAR DOWN CHARGE 912. RR&I ALL LKQ/USED COMPONETS	
913. INSIDE STORAGE	
914. OUTSIDE STORAGE	
915. ADMINISTRATIVE FEE - TYPICAL	
916. ADMINISTRATIVE FEE - EXTENSIVE	
917. REPLACE ALUMINUM SILICATE STONE	
918. REPLACE ALUMINUM PRIMER	
919. REPLACE CLEANING SOLUTION (ALL WELDED AND BONDED PANELS)	
920. REMOVE HOT WAX COATING	
921. INSTALL FLOWABLE HOT SEALER	
922. REPLACE FLOW FORM BOLT	
923. REPLACE PUNCH INSERT	
924. INSTALL PYROSIL COATING AND ADHESION	
925. REPLACE BELT SANDER BELT KIT	
926. REPLACE INJECTION ADHESION REMOVER	
927. PREP ALUMINUM COUPONS AND PREP TIME (PREP WELD) 928. REPLACE ALUMINUM CUTTING WHEEL	
929. RECHARGE VEHICLE FOR DELIVERY	
930. REPLACE CUTTING TOOL LUBRICATION KIT	
931. REPLACE ALUMINUM CLEANING BRUSH	
932. REPLACE SPR'S ,FLOW FORM, CLINCH, HUCK PINS AND BLIND RIVETS	
933. REPLACE TWO PART STRUCTURAL ADHESIVE	
934. REPLACE BODY SAW BLADE 935. LAZER WELD REMOVER TWIST	
935. LAZER WELD REMOVER TWIST 936. REPLACE HOS COBALT BIT	
930. REPLACE HOS COBALT BIT 937. ALUMINUM SUBSTRAIGHT LABOR RATE	
938. ALUMINUM SUBSTRAIGHT STRUCTURAL RATE	
939. REPLACE FANTHEL COATING	
940. DYE PENETRANT CHECK COATING (WELD TEST)	
941. REPAIR FLANGE CLEAVES AFTER RIVET BOND APPLICATION	
942. ALUMINUM EPOXY PRIMER APPLICATION	



943. REPLACE ALUMINUM REPAIR CUPS	
944. REPLACE DACREMET PRIMER SEALER	
945. REPAIR ALUMINUM FLANGE	
946. SPR RIVET KIT	
947. SPR PUNCH RIVET PRESSURE RING	
948. EXPANSION FOAM	
949. FABRICATE SLEEVE INSERT	
950. FLOW FORM RIVET SET	
951. STRUCTURAL ADHESIVE	
952. SELF LEAVING SEAM SEALER	
953. REPLACE ALUMINUM WIRE FOR MAG WELDER	
954. ADHESIVE CLEAN UP (BENCH)	
955. ALUMINUM PULL PINS	
956. REPLACE NON-CONDUCTIVE STRUCTURAL URETHANE	
957. JIG BENCH SET UP (LOWER)	
958. JIG BENCH SET UP (UPPER)	
959. JIG RENTAL (PLUS SHIPPING BOTH WAYS)	
960. JIG BENCH (SIDE GANTREY)	
961. JIG BENCH DOWNTIME (WAITING ON APPROVAL, JIGS OR PARTS)	
962. DIAG REFERANCE CODES	
963. VOLTAGE TEST (PRIOR TO REPAIRS)	
964. BLEED COOLING SYSTEM	
965. A/C CHARGE	
966. COOLING FAN TEST	
967. RE-SET INSTRUMENT CLUSTER	
968. DISABLE BATTERY LOOP	
969. RE-SET AIR SUSPENSION	
970. RE-SET TPMS	
971. RIDE HEIGHT TEST (MAY REQUIRE MULTIPLE TESTS)	
972. DE-GAS AIR SUSPENSION	
973. INSPECT AND CHECK WATER PUMPS (EACH PUMP)	
974. R&I CABIN FILTER BEFORE REFINISH	
975. RECALIBRATE WINDOW SYSTEMS	
976. SEAM SEAL DOOR	
977. SEAM SEAL LIFTGATE	
978. SEAM SEAL HINGE	
979. R&I REAR SUSPENSION WITH (BATTERY R&I ACCESS)	
980. CAMERA AND RADAR RECALIBRATION TEST	
981. YF 1234 REFRIGERANT (PER POUND)	
982. ALUMINUM WIRE KIT PER PANEL	
983. WELDING WIRE	
984. COBALT BIT PACK	
985. MIG BRAZING KIT	
986. CAVITY WAX INSTALLATION PER PANEL	
987. RESET ELECTRONICS	
988. MASKING FOR APPLYING DYE PENENTRANT (EACH PANEL)	
989. CHECK FOR CRACKS USING DYE PENENTRANT	
990. APPLY EPOXY PRIMER COAT	
991. SECONDARY CLEANING FOR OXIDE REMOVAL (PER PANEL)	
992. HEATING/BAKING HARDENED ALUMINUM TO LOOSEN ADHESIVE	
993. CLEANING PREP AREA OF ADHESIVE (PRIOR TO DRYING)	



	1	
994. REMOVAL OF ELECTRONICS WITH 300 MM OF WELDING ZONE		
995. RESETTING AND DIAGNOSIS OF ELECTRONICS		
996. COUNTER SINK ALUMINUM FOR RIVET APPLICATION (PER RIVET)		
997. REMOVE STRUCTURAL ADHESIVE ADJACENT PANELS (PER PANEL)		
998. CALIBRATE AND MEASURE METAL THICKNESS FOR CORRECT DIAMETER		
999. FABRICATE AND PUNCH HOLE FOR FREE FLOW RIVET (PER HOLE)		
1000. ADHESIVE "WET TIME" ON FIXTURE BENCH (CELETTE-CAR-BENCH-CAROLINER)		
1001. APPLY NON-DIELECTRIC ADHESIVE TO GLASS AREAS		
1002. CLEANING AND DEGREASING PANEL(S) PRIOR TO ADHESIVE INSTALLATION		
1003. BUILD SEQUENCE ON ADJACENT ALUMINUM PANELS (PER PANEL)		
1004. APPLYING HEATING SOURCE AND MONITORING PANEL(S) DURING REPAIR PROCESS		
1005. TEST FITTING PRIOR TO INSTALLING PART (PER PANEL)		
1006. SECONDARY MEASUREMENT PRIOR TO BONDING ADHESIVE APPLICATION		
1007. CONSTRUCTING SLEEVE OR BACKER PLATE FOR PANEL REPLACEMENT		
1008. REMOVE DAMAGED PARTS FOR REPAIR/REPLACEMENT ACCESS		
1009. ADVANCED CHARGES		
1010. TOW FEE TO DEALER		
1011. TOW FEE BACK FROM DEALER, RETURN		
1012. IMMOBILE VEHICLE OR PART, YARD SERVICE FEE (FORK LIFT USE)		
1013. INOPERATIVE VEHICLE (NO START/NO KEYS)		
1014. RELOCATION FEE		
1015. VEHICLE PICKUP SERVICE FEE		
1016. FLUID SPILL CLEAN UP FEE (ADD FOR ABSORBENT MATERIAL)		
1017. VEHICLE DISPOSAL FEE		
1018. RESTOCKING FEE'S		
1019. PROTECT INTERIOR (ADD FOR PLASTIC WRAP MATERIAL)		
1020. CUSTOMER ASSISTANCE FEE (GATHERING OF PERSONAL ITEMS)		
1021. AFTER HOURS RELEASE FEE		
1022. VEHICLE PROCESSING FEE (DMV)		
180 - FINAL BILL/MISCELLANEOUS:		
1023. SHIPPING/TRANSPORTATION CHARGES		
1024. TIRE DISPOSAL FEE		
1025. RECHARGING FEE		
1026. BATTERY DISPOSAL FEE		
1027. OIL DISPOSAL FEE		
1028. SOLID WASTE DISPOSAL FEES		
1029. VISUAL DAMAGE ESTIMATE (NO-REPAIR/O.R.CUSTOMER)		
1030. FINAL BILL, AUTHORIZATION TO PAY SECURED		
1031. MINIMUM DISASSEMBLE FEE		
1032. NEED TEAR DOWN FOR COMPLETE ESTIMATE		
1033. TOTAL LOSS ADMINISTRATION FEE		